


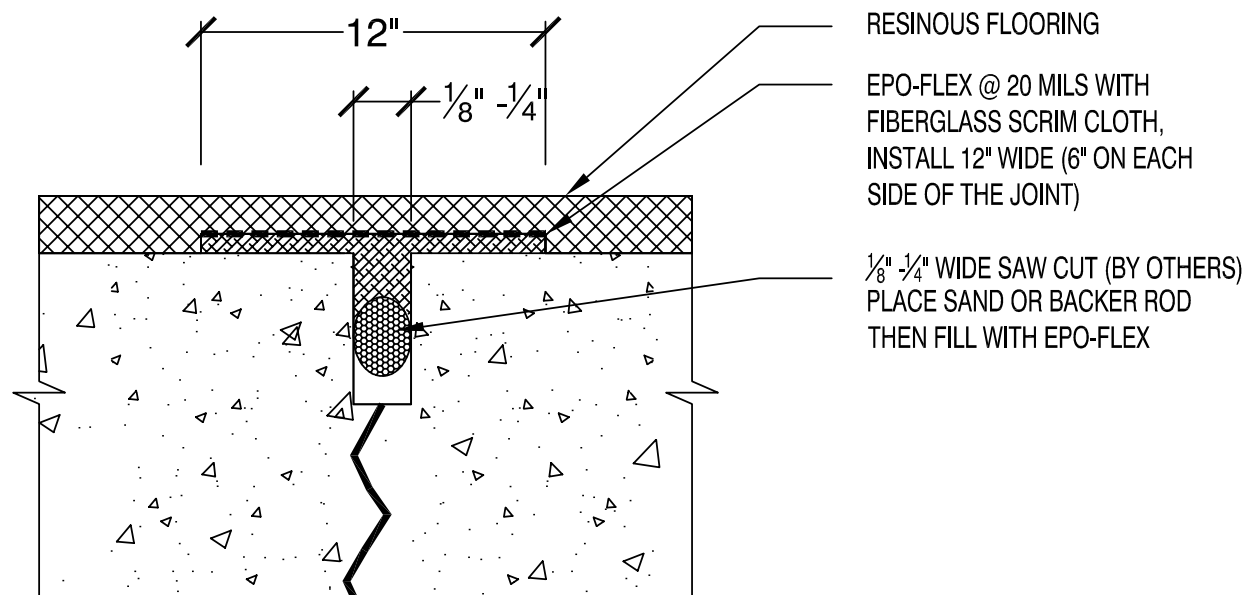

RESINOUS FLOORING

EPO-FLEX @ 20 MILS WITH
FIBERGLASS SCRIM CLOTH,
INSTALL 12" WIDE (6" ON EACH
SIDE OF THE JOINT)

1/8" - 1/4" WIDE SAW CUT (BY OTHERS)
PLACE SAND OR BACKER ROD
THEN FILL WITH EPO-FLEX

J4 CONCRETE COLD JOINT DETAIL

NTS

SHERWIN- WILLIAMS
TYPICAL FLOORING DETAIL
CONCRETE COLD JOINT

J4