

RESUFLOR™ DECO FLAKE DQF SYSTEM

Formerly Flake DQF

TABLE OF CONTENTS

•	RESUFLOR™ MPE PDS	2-5
•	RESUFLOR™ UVE PDS	6-9
•	ACCELERA™ 4850 PDS	10-11
•	SYSTEM OVERVIEW	12-13
•	APPLICATION INSTRUCTIONS	14-17
•	1/8" and 1/4" DECO FLAKE COLOR CHARTS	18-2 [,]
•	SURFACE PREPARATION (FORM G-1)	22-30
•	FLOOR EVALUATION GUIDELINES	31-33
•	CHEMICAL RESISTANCE CHART	34
•	CLEANING GUIDELINES	35-36
•	JOINT GUIDELINES	37-38
•	CRACK TREATMENT GUIDELINES	39-40
•	STANDARD WARRANTY	41

LEGAL TERMS

All sales are subject to The Sherwin-Williams Company Terms and Conditions of Sale located at:

www.sherwin-williams.com/terms-and-conditions

Any customer terms and conditions that are in addition to, are different from or in conflict with the Sherwin-Williams Terms and Conditions of Sale are rejected by Sherwin-Williams and shall be of no force or effect unless accepted and agreed to in a separate writing from Sherwin-Williams.

Estimating tools and usage guides are provided for convenience and are not exact instructions. Estimates are provided on a best endeavors basis only and a fixed price quotation should be obtained prior to quoting. Additional guidance on estimating materials needs, costs, and installation methods and best practices are available from your Sherwin-Williams representative. Prices are subject to change at Sherwin-Williams' discretion, without notice.



GP3760A01 PART A PART B GP3760B01

CLEAR HARDENER

Revised: June 3, 2025

PRODUCT INFORMATION

PRODUCT DESCRIPTION

RESUFLOR MPE is a neutral, two-component, high solids epoxy. Applied at 3 mils (76.2 microns) for priming or up to 30 mils (762 microns) (1/32 inch) as a build coat. Slurry option is available (instructions at end of document) for thicker applications. Colors are optional.

Advantages:

- LEED® v4 Indoor Air Quality credits available meets requirements per CDPH-CA Section 01350 Standard Method for the Testing and Evaluation of Volatile Organic Chemical Emissions from Indoor Sources Using Environmental chambers Version 1.2.
- · Seals concrete, protecting against dirt and spills
- · Cleans easily, saving detergent, labor and water
- Complies with SCAQMD VOC regulations <100 g/L

TYPICAL USES

- Stand-alone coating (a finish coat of urethane is recommended)
- Seed coat for full broadcast flake and guartz floors
- · Resin for epoxy mortar system
- · Use as a concrete primer before applying another epoxy or
- Use as a random crack filler when combined with thickening agents
- · Level floor after mechanical prep

GENERAL INFORMATION

Colors: Use colorants at a rate of one unit per 3-gallon (11.34 litres) mix of Resuflor MPE. Standard Colorants--White, Yellow and Light Gray will not impart total hide. Use these colorants at a rate of two units per 3-gallon (11.34 litres) mix. Similar colorants also may not hide as well. Refer to Color Selection Guide or consult Sherwin-Williams Technical Support. (White and Light Gray are only recommended if topcoating with a non-yellowing urethane. Due to possible color inconsistencies, Battleship Gray and Medium Gray colorants are only recommended if topcoated.)

LIMITATIONS:

Colors: Multiple coats may be needed to achieve complete hide in lighter systems. UV/Light Stability: This product is not light stable and will yellow/amber over time. Contamination (Fisheyes): Products may fisheye if oil, silicones, mold release agents or other contaminants are present

ORDERING INFORMATION

Packaging:

Part A: 2 gallons (7.56L) in a 5 gallon (18.9L) pail,

5 gallon (18.9L) filled pails, 55 gallon (208L) filled

Part B: 1 gallon (3.78L) containers, 5 gallon (18.9L)

filled pails, 55 gallon (208L) filled drums

PRODUCT CHARACTERISTICS

Color: Clear

Volume Solids: 95.27%, mixed (ASTM D1475) Weight Solids: 95.45%, mixed (ASTM D1475)

Mix Ratio: 2:1 by volume VOC (ASTM D3960): 49 g/L; 0.41 lb/gal

Recommended Spreading Rate per coat:				
Minimum Maximum			mum	
Wet mils (microns)	3.0	(75)	30.0	(750)
~Coverage sq ft/gal (m²/L):	53	(1.3)	535	(13.1)

Drying Schedule:

@ @ @ @ 65°F/18°C 70°F/21°C 75°F/24°C 80°F/27°C 90°F/32°C

18 hours 10.5 hours 9.5 hours 7.5 hours 5.5 hours Tack Free:

Dry Hard (able to be sanded): 24 hours 20 hours 16 hours 12 hours 8 hours Foot Traffic: 24 hours 24 hours 24 hours 24 hours Recoat Window: Maximum: Up to 24 hours for all conditions

Shelf Life: 12 months, unopened

Store indoors at 65°F (18°C) to 90°F (32°C)

PERFORMANCE CHARACTERISTICS

Test Name	Test Method	Results*
Abrasion Resistance	ASTM D4060, CS-17 wheel, 1000gm load, 1000 cycles	83.1 mg loss
Adhesion to Concrete	ASTM D7234	>480 psi (3.3 MPa) (max psi machine can register)
Coefficient of Friction	ASTM D2047	0.42
Compressive Strength	ASTM D695	13,500 psi (93.079 MPa)
Percent Elongation	ASTM D2370	5
Shore D Hardness	ASTM D2240	80-85 @ 0 sec; 75-80 @ 15 sec
Tensile Strength	ASTM D2370	8,000 psi (55,158 MPa)

^{*}results are based on conditions at 77°F (25°C)



PART A PART B

GP3760A01 GP3760B01

CLEAR HARDENER

Revised: June 3, 2025

PRODUCT INFORMATION

SURFACE PREPARATION

CHECK THE TEMPERATURE AND HUMIDITY: Floor temperature and materials should be between 65°F (18°C) and 85°F (29°C). Humidity must be less than 70% or the result may be a hazy appearance. DO NOT coat unless floor temperature is more than five degrees over the current, local dew point.

CHECK THE CONCRETE: Concrete must be structurally sound and free of curing membrane, paint or other sealer. If you suspect that the concrete has been previously sealed, call your Sherwin-Williams representative for further instructions.

CHECK FOR MOISTURE: Concrete must be dry before application of this floor coating material. Concrete moisture testing must occur. In-situ relative humidity testing is recommended. Readings must be below 75% relative internal concrete humidity. Test methods can be purchased at www.astm.org, see F2170, or follow manufacturer's instructions. If moisture issues are present, the use of a moisture mitigationsystem may be a consideration. Consult your Sherwin-Williams representative for further information / instructions.

NOTE: Although testing is critical, it is not a guarantee against future problems. This is especially true if there is no vapor barrier or the vapor barrier is not functioning properly and/or you suspect you may have concrete contamination from oils, chemical spills or excessive salts.

APPLICATION EQUIPMENT

• Roller assembly (18") 80 grit sandpaperSpiked shoes

• Slow speed drill (500 rpm or less)

- Protective clothing
- Jiffy® mixer blade
- 100 grit sandpaper

- 60 grit sandpaper
 60 grit sandpaper
 18-24" flat rubber squeegee
 18-24" notched rubber squeegee
 3/8" medium nap roller (shed resistant)

ASSEMBLE EQUIPMENT: Due to the limited pot life of the material, all application equipment, etc. should be ready for immediate use. (Clean roller with tape to remove any residual lint.)

PREPARATION

Ensure concrete is free of dirt, grease, oil or other contaminants. Certain types of contaminant may interfere with coating adhesion and cause fisheyes or defect in the coating. Scrub with detergent, rinse with clean water, and allow to fully dry.

CONCRETE PREPARATION OPTIONS FOR THIN TO MEDIUM FILM APPLICATIONS (25 MILS (0.63 MM) MAXIMUM): Diamond Grind: (results of diamond grinding may vary depending on technique and the hardness of the concrete. Additional mils may be required). Sweep to remove large debris and vacuum to remove fine

Light Blast: Use magnetic broom to remove excess shot, sweep to remove large debris and vacuum to remove fine dust.

CONCRETE PREPARATION OPTIONS FOR THICK-FILM APPLICATIONS

Steel Shot Blast: Use magnetic broom to remove excess shot, sweep to remove large debris and vacuum to remove fine dust. Scarify: Sweep to remove large debris and vacuum to remove fine dust.

FILLING JOINTS: Depending on the preference of the facility owner, joints may or may not be filled. If the joints are filled, non-moving joints, i.e. contraction or control joints, can be hard filled with thickened epoxy or with a semi-rigid joint filler such as Resuflor 3580. Construction joints less than one inch wide may also be filled with Resuflor 3580. Isolation or expansion joints must be filled with a flexible material designed for this purpose. Coating applied over filled joints may crack if there is concrete movement.

APPLICATION INSTRUCTIONS (PRIMER COAT)

PRIMER COAT:

A thin coat of primer will wet out concrete, help seal off concrete pores and minimize outgassing bubbles. Apply a tight coat of primer with a clean, flexible squeegee. Backrolling is not recommended. There should be no mil build over the high spots of the concrete.

COVERAGE RATE will depend upon coating thickness. Much of this will soak into porous concrete. One gallon (3.78 litres) of Resuflor MPE will

535 ft2 (49.70 m2) @ 3 mils (0.08 mm) wet/dry film 400 ft2 (37.16 m2) @ 4 mils (0.10 mm) wet/dry film 321 ft2 (29.82 m2) @ 5 mils (0.13 mm) wet/dry film

PREMIX PART A using a Jiffy mixer blade and slow speed drill. (This is required for both 3-gallon (11.34 litres) and full-filled 5-gallon (18.9 litres) units.) For full-filled 5 gallon pails (18.9 litres), pour out 2 gallons (7.56 litres) into a measuring container. Then, pour the measured Part A into a mixing pail.

COLORS: Premix Sherwin-Williams Colorants to ensure uniform color. Colorant is added to the Part A and mixed using a Jiffy® mixer blade and slow speed drill. NOTE: When using colorant in the bulk units, add the colorant to the Part A that has been measured into the "mixing pail".

PREMIX Resuflor MPE PART B by rapidly tipping the pail end-over-end several (approximately 6) times. ADD Resuflor MPE PART B TO PART A (3 GALLONS / 11.34 LITRES TOTAL MIX). For full-filled 5-gallon pails (18.9 litres), pour out 1 gallon (3.78 litres) Part B into a measuring container Part B to the Part A already in the mixing pail. POTLIFE: Mix only enough material which can be applied within the work time (time between the addition of Part B to Part A and the completion of all application actions). Check the following chart for work times at various temperatures. For smaller quantities, use 2 parts A to 1 part B by volume.

APPROXIMATE WORK TIME (minutes) - °F (°C): 65 (18.3) 70 (21.1) 75 (23.9) 80 (26.7) 90 (32.2) 40 30 25 20 15

MIX FOR 2 MINUTES using a Jiffy mixer blade and slow speed drill. (Failure to do so could result in lower/diminished coating properties.)

IMMEDIATELY POUR ALL OF THE MIXED MATERIAL onto the floor in a single bead.

PUSH THE FLAT SQUEEGEE at an even speed with sufficient down pressure to apply the thinnest coat.

START THE SECOND AND REMAINING PASSES by pushing material parallel to the first stroke. Hold the bead of material near the center of the bar. NOTE: Resuflor MPE applied thin may "bridge" holes and cracks momentarily before soaking in-make sure the previously squeegeed area is overlapped (halfway). NOTE: The use of spiked shoes will allow freedom of movement on the wet floor.

TO REDUCE OUTGASSING BUBBLES, it is best to wait until the primer has set up enough to walk on before applying a build coat of Resuflor MPE. The primer does not need to be sanded if coated within 24 hours at floor temperatures 65°F-90°F (18°C-32°C).

If primer is not coated within 24 hours, it must be sanded with 60 grit paper. We recommend thorough sanding with a swing-type buffer so that multiple scratch marks cause an obvious gloss loss on all areas (depressions will remain shiny), and the floor is uniformly dulled. The ability to see individual scratch marks is an indication that sanding is not adequate. Scrub with detergent and rinse with clean water before coating.



PART A PART B GP3760A01 GP3760B01 CLEAR HARDENER

Revised: June 3, 2025

PRODUCT INFORMATION

APPLICATION INSTRUCTIONS (CONT'D)

BUILD COAT (if required):

COVERAGE RATE will depend upon required thickness. One gallon (3.78 litres) of Resuflor MPE will cover: 160 ft2 (14.86 m2) @ 10 mils (0.25 mm) wet/dry film 107 ft2 (9.94 m2) @ 15 mils (0.38 mm) wet/dry film 80 ft2 (7.43 m2) @ 20 mils (0.51 mm) wet/dry film

NOTE: Total Resuflor MPE (prime and build coat) should not exceed 35 mils (0.89 mm).

REPEAT STEPS used for mixing and spreading of the primer coat. A notched squeegee can be used to increase the thickness applied.

*1/16" notched squeegee to apply 10-15 mils (0.25-0.38 mm) *1/8" notched squeegee to apply 15-20 mils (0.38-0.51 mm)

*1/4" notched squeegee to apply more than 20 mils (0.51 mm) *These guidelines were arrived at by using new squeegees on smooth concrete with little applied pressure. The application rate is affected by worn squeegees, applied pressure and texture of the concrete.

Immediately after the Resuflor MPE is applied and there is room to roll, a second person will BACKROLL THE MATERIAL with a 3/8" roller to a smooth and uniform appearance. NOTE: Get off the Resuflor MPE as soon as possible.

ALLOW COATING TO CURE 24 hours at 75°F (24°C) before opening to light traffic. Allow more time at low temperatures or for heavier traffic. Full coating properties take 14 days to develop.

SANDING REQUIRED:

Resuflor MPE must be thoroughly sanded if applying Resutile 4641 (see chart below).

APPROXIMATE SAND TIME (hours) - °F (°C): 65 (18.3) 70 (21.1) 75 (23.9) 80 (26.7) 90 (32.2) 24 20 16 12 8

Resuflor MPE must also be sanded if applying other Sherwin-Williams urethanes after 24 hours. Use 80 grit sandpaper except for Resutile 4641, WearGuard™-240 Gloss and Sherwin-Williams CRU-use 100 grit sandpaper. The use of more aggressive paper will introduce deep grooves that will not be covered by a single, thin coat of urethane; swirl marks will be particularly evident if the topcoat is glossy. We recommend thorough sanding with a swing-type buffer so that multiple scratch marks cause an obvious gloss loss on all areas (depressions will remain shiny), and the floor is uniformly dulled. The ability to see individual scratch marks is an indication that sanding is not adequate. Scrub with detergent and rinse with clean water before coating and tack rag to remove fine dust.

APPLICATION INSTRUCTIONS (CONT'D)

OPTIONAL SLURRY:

NOTE: If a slurry application is desired, follow instructions below. A primer coat will reduce the risk of outgassing bubbles and is strongly recommended for porous concrete. See Application - Primer Coat section.

COVERAGE RATE of Resuflor MPE Slurry will depend upon required thickness. One mix will cover approximately: 80 ft2 (7.4 m2) @ 70 mils (1.78 mm) wet/dry film 40 ft2 (3.7 m2) @ 125 mils (3.18 mm) wet/dry film

PREMIX RESUFLOR MPE PART A using a Jiffy mixer blade. Pour out 1 gallon (3.78 litres) into a measuring container. Then, POUR THE MEASURED PART A INTO THE MIXING TOTE. Begin mixing.

PREMIX RESUFLOR MPE PART B. Pour out 0.50 gallons (1.89 litres) Part B into a measuring container that is separate from the one used with the Part A. Then, ADD THE MEASURED PART B TO THE PART A already in the mixing tote.

MIX FOR 1 MINUTE or until thoroughly blended using a Jiffy mixer blade and slow speed drill.

POUR ONE GALLON (3.78 LITRES) OF #290 SILICA FLOUR into the mixing tote. Mix until uniform (approximately one minute). The resin needs to completely wet out the Part C.

COLORS: ADD 1/2 pint of pigment per batch.

ADD ONE GALLON (3.78 LITRES) OF #60 MESH FINE SILICA SAND into the mixing tote. Mix until uniform (approximately one minute). The resin needs to completely wet out the sand.

POTLIFE AT 75°F: Mix only enough material, which can be raked, troweled and porcupine rolled in a 15-minute period.

POUR THE MIXED MATERIAL onto floor.

GAUGE RAKE/NOTCH TROWEL material over desired area.

USE HAND TROWELS to finish along edges and drains.

USE PORCUPINE ROLLER to release any entrained air as well as work resins to the surface. This will help remove gauge rake marks and level material.

ALLOW COATING TO DRY 24 HOURS at 75°F (24°C), 50% relative humidity before opening to light traffic. Allow more time at low temperatures, low humidity or for heavier traffic. Full coating properties take 14 days to develop.

APPLICATION OF ADDITIONAL COATINGS: If Resuflor MPE is being topcoated with a Sherwin-Williams urethane except Resutile HPS 100 at floor temperatures of 65-90°F (18-32°C), it does not need to be sanded if applied within 24 hours. NOTE: This is a Sherwin-Williams solution only, DO NOT try this with competitive epoxies.



PART A
PART B

GP3760A01 GP3760B01 CLEAR HARDENER

Revised: June 3, 2025

PRODUCT INFORMATION

CHEMICAL RESISTANCE			
Reagent	1 Day	7 Days	
Hydrochloric Acid 10%	E	E	
Hydrochloric Acid 30% (Muriatic)	E	G	
Nitric Acid 10%	E	G	
Phosphoric Acid 50%	F	G	
Sulfuric Acid 37% (Battery Acid)	G	G	
Acetic Acid 10%	G	F	
Citric Acid 10%	G	G	
Oleic Acid	G	F	
Ammonia Hydroxide 10%	Е	E	
Sodium Hydroxide 50%	E	E	
Ethylene Glycol (Antifreeze)	Е	G	
Isopropyl Alcohol	F	Р	
Methanol	F	F	
D-Limonene	G	G	
JP-4 Jet Fuel	E	E	
Gasoline	G	G	
Mineral Spirits	E	E	
Xylene	F	F	
Methylene Chloride	Р	Р	
MEK	Р	Р	
РМА	F	F	
Ammonium Nitrate 20%	E	E	
Brake Fluid	F	F	
Bleach	E	E	
Motor Oil (SAE 30)	E	E	
Skydrol® 500B	F	F	
Skydrol® LD4	F	F	
Sodium Chloride 20%	Е	E	
1% Tide® Laundry Soap	E	E	
10% Trisodium Phosphate	Е	Е	

ASTM D1308 Test Method 3.1.1 spot test, covered. Results are based on 1-day and 7-day. Coating cured 2 weeks prior to testing.

- E Excellent (no adverse effect) Recommended
- G Good (limited adverse effect) Use for short-term exposure only
- F Fair (moderate adverse effect) Not recommended
- P Poor (unsatisfactory) Little or no resistance to chemical

*only adverse effect was staining

NOTE: Reduced chemical resistance and staining is possible in pigmented versions of the system

MAINTENANCE

Allow floor coating to cure at least one week before cleaning by mechanical means (e.g., sweeper, scrubber, disc machine).

Care: Proper maintenance will increase the life and help maintain the appearance of your new Sherwin-Williams floor coating. Sweep and scrub your new coating regularly, as dirt and dust are abrasive and can quickly dull the finish, decreasing the life of your coating. Remove spills quickly as certain chemicals may stain and could possibly permanently damage the finish. Use soft nylon brushes or white pads on your new floor coating. Any brush more abrasive than a soft nylon or white pad can cause premature loss of gloss.

Caution: Avoid scratching or gouging the surface. All floor coatings will scratch if heavy objects are dragged across the surface. Do not drop heavy or pointed items on the floor as this may causing chipping or concrete popouts in the case of a weak cap. Rubber tires can permanently stain the floor coating from plasticizer migration. Plexiglass® between the tire and the floor coating can prevent discoloration. Rubber burns from quick stops and starts can heat the coating to its softening temperature, causing permanent marking.

Repair: Repair gouges or scratches or chip outs as soon as possible to prevent moisture or chemical contamination.

TINTING

Only tint with HPF Universal Colorants. Do not tint with GIS colorants. Use one pint of colorant per 3-gallon mix of Resuflor MPE for most colors, and two pints per 3-gallon mix of Resuflor MPE for White, Bright Yellow, Light Gray, and Rotunda Red.

SAFETY

Refer to the SDS sheet before use.

Published technical data and instructions are subject to change without notice. Contact your Sherwin-Williams representative for additional technical data and instructions.

DISCLAIMER

The information and recommendations set forth in this Product Data Sheet are based upon tests conducted by or on behalf of The Sherwin-Williams Company. Such information and recommendations set forth herein are subject to change and pertain to the product offered at the time of publication. Consult your Sherwin-Williams representative to obtain the most recent Product Data Information and Application Bulletin.

WARRANTY

The Sherwin-Williams Company warrants our products to be free of manufacturing defects in accord with applicable Sherwin-Williams quality control procedures. Liability for products proven defective, if any, is limited to replacement of the defective product or the refund of the purchase price paid for the defective product as determined by Sherwin-Williams. NO OTHER WARRANTY OR GUARANTEE OF ANY KIND IS MADE BY SHERWIN-WILLIAMS, EXPRESSED OR IMPLIED, STATUTORY, BY OPERATION OF LAW OR OTHERWISE, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.



RESUFLOR™ UVE ULTRAVIOLET EPOXY

PART A GP3570A01 PART B GP3570B01 CLEAR HARDENER

Revised: January 2, 2025

PRODUCT INFORMATION

PRODUCT DESCRIPTION

RESUFLOR UVE high solids, two-component epoxy with excellent UV resistance. Typically used to seal quartz and flake applications and is one of the primary components of the metallic system. Resuflor UVE may also be used as a standalone coating. Orange-peel option using fumed silica is available (instructions at end of document) for applications requiring a thicker product (e.g., wall systems).

Advantages:

- LEED® CREDIT LEED Green Building Certification Program credits may be available:
 - Indoor Environmental Quality
 - 4.2 Low-Emitting Materials, Paint & Coatings
- · Excellent UV resistance
- · Seals concrete, protecting against dirt and spills
- · Cleans easily, saving detergent, labor and water

TYPICAL USES

- Stand-alone coating (a finish coat of urethane is recommended for better UV and chemical resistance)
- Use over other 100% solids epoxies for increased UV resistance
- Recommended epoxy for metallic pigment system
- Seals full broadcast quartz or flake applications
- Colored background in random flake applications

GENERAL INFORMATION

OPTIONS:

Colors: Use colorants at a rate of one unit per 3-gallon (11.34 litres) mix of Resuflor UVE. Standard Colorants--White, Yellow and Light Gray will not impart total hide. Use these colorants at a rate of two units per 3-gallon (11.34 litres) mix. Similar colorants also may not hide as well. Refer to Color Selection Guide or consult Sherwin-Williams Technical Support.

Orange Peel: Resuflor UVE with fumed silica can be used as a topcoat to achieve a textured appearance.

LIMITATIONS:

Colors: Multiple coats may be needed to achieve complete hide in lighter systems.

UV/Light Stability: This is an epoxy product with improved UV resistance, but it may amber/yellow over time.

Thickness: The clear, thickened version of Resuflor UVE with fumed silica will "ghost" or will appear cloudy if applied at >8 mils per coat.

Contamination (Fisheyes): Products may fisheye if oil, silicones, mold release agents or other contaminants are present.

ORDERING INFORMATION

Packaging:

Part A: 1 gallon (3.78L) containers, 2 gallons (7.56L) in

a 5 gallon (18.9L) pail, 5 gallon (18.9L) filled pails,

55 gallon (208L) filled drums

Part B: 1 gallon (3.78L) containers, 5 gallon (18.9L)

filled pails, 55 gallon (208L) filled drums

PRODUCT CHARACTERISTICS

Volume Solids: 98%, mixed (ASTM D2369)
Weight Solids: 97.87%, mixed (ASTM D2369)

Mix Ratio: 2:1 by volume

VOC (ASTM D3960): <50 g/L; 0.4 lb/gal, mixed

Recommended Spreading Rate per coat:				
	Mini	mum	Maxi	mum
Wet mils (microns)	3.0	(75)	30.0	(750)
~Coverage sq ft/gal (m²/L):	53	(1.3)	535	(13.1)

Ooverage 34 ingai (i	11/∟/- •	55	(1.0)	333	(10.1)
Drying Schedule:					
	@ 65°F (18°C)	@ 70°F (21°C)	@ 75°F (24°C)		@ 90°F (32°C)
Tack Free Time:	12.5 hours	10 hours	8.5 hours	7 hours	5.5 hours
Dry Hard (able to be sanded):	18 hours	14 hours	12 hours	10 hours	8 hours
Foot Traffic:	24 hours	24 hours	24 hours	24 hours	24 hours
To Recoat: Maximum: up to 24 hours for all conditions					

Shelf Life: 12 months, unopened

Store indoors at 65°F (18°C) to 90°F (32°C)

PERFORMANCE CHARACTERISTICS

Test Name	Test Method	Results*
Abrasion Resistance	ASTM D4060, CS-17 wheel, 1000gm load, 1000 cycles	42 mg loss
Adhesion to Concrete	ASTM D7234	>480 psi (3.31 MPa), max psi machine can register
Compressive Strength	ASTM D695	15,800 psi (108.94 MPa)
Percent Elongation	ASTM D2370	4% (10 mils, 7 day cure)
Shore D Hardness	ASTM D2240	80-85 @ 0 sec / 70- 85 @ 15 sec
Tensile Strength	ASTM D2370	6,900 psi (47.57 MPa)
Water Absorption (24-hour immersion, resin only)	ASTM D570	2.35% increase in weight

*Results are based on conditions at 70°F (21°C)



RESUFLOR™ UVE ULTRAVIOLET EPOXY

PART A PART B GP3570A01 GP3570B01 CLEAR HARDENER

Revised: January 2, 2025

PRODUCT INFORMATION

CHEMICAL RESISTANCE			
	24-hour uncovered	1 Day / 7 Days covered	
10% Hydrochloric Acid	E	E/E	
30% Hydrochloric Acid (Muriatic)	E	G/G	
10% Nitric Acid	E	E/G	
50% Phosphoric Acid	F	F/F	
37% Sulfuric Acid (Battery Acid)	E	E/G	
10% Acetic Acid	F	F/F	
10% Citric Acid	E	E/G	
Oleic Acid	G	F/F	
10% Ammonium Hydroxide	E	E/E	
50% Sodium Hydroxide	E	E/E	
Ethylene Glycol (Antifreeze)	E	E/	
Isopropyl Alcohol	E	F/F	
Methanol	G	P/P	
d-Limonene	E	G/G	
Jet Fuel - JP-4	E	E/G	
Gasoline	E	E/G	
Mineral Spirits	E	E/E	
Xylene	E	F/F	
Methylene Chloride	Р	P/P	
Methyl Ethyl Ketone (MEK)	G	P/P	
Propylene Glycol Methyl Ether Acetate (PMA)	F	F/F	
20% Ammonium Nitrate	E	E/E	
Brake Fluid	F	F/F	
Bleach	E	E/E	
Motor Oil (SAE 30)	E	E/E	
Skydrol 500B	F	F/F	
Skydrol LD4	F	F/F	
20% Sodium Chloride	E	E/E	
1% Tide Laundry Soap	E	E/E	
10% Trisodium Phosphate	E	E/E	
Jet Fuel Phillips "Blue" Aviation Gasoline	E	E/G	
Unleaded Gas + Ethanol	E	F/F	

ASTM D1308 Test Method 3.1.1 spot test, covered. Results are based on 1-day and 7-day. Coating cured 2 weeks prior to testing.

- E Excellent (no adverse effect) Recommended
- G Good (limited adverse effect) Use for short-term exposure only
- F Fair (moderate adverse effect) Not recommended
- P Poor (unsatisfactory) Little or no resistance to chemical

*only adverse effect was staining

NOTE: Reduced chemical resistance and staining is possible in pigmented versions of the system

MAINTENANCE

Allow floor coating to cure at least one week before cleaning by mechanical means (e.g., sweeper, scrubber, disc machine).

Care: Proper maintenance will increase the life and help maintain the appearance of your new Tennant floor coating. Sweep and scrub your new coating regularly, as dirt and dust are abrasive and can quickly dull the finish, decreasing the life of your coating. Remove spills quickly as certain chemicals may stain and could possibly permanently damage the finish.

Use soft nylon brushes or white pads on your new floor coating. Any brush more abrasive than a soft nylon or white pad can cause premature loss of gloss.

Caution: Avoid scratching or gouging the surface. All floor coatings will scratch if heavy objects are dragged across the surface.

Do not drop heavy or pointed items on the floor as this may causing chipping or concrete popouts in the case of a weak cap.

Rubber tires can permanently stain the floor coating from plasticizer migration. Plexiglass between the tire and the floor coating can prevent discoloration.

Rubber burns from quick stops and starts can heat the coating to its softening temperature, causing permanent marking.

Repair: Repair gouges or scratches or chip outs as soon as possible to prevent moisture or chemical contamination.

TINTING

Only tint with HPF Universal Colorants. Do not tint with GIS colorants. Use one pint of colorant per 3-gallon mix of Resuflor UVE for most colors and two pints per 3-gallon mix of Resuflor UVE for White, Bright Yellow, Light Gray, and Rotunda Red.

SAFETY

Refer to the SDS sheet before use.

Published technical data and instructions are subject to change without notice. Contact your Sherwin-Williams representative for additional technical data and instructions.

DISCLAIMER

The information and recommendations set forth in this Product Data Sheet are based upon tests conducted by or on behalf of The Sherwin-Williams Company. Such information and recommendations set forth herein are subject to change and pertain to the product offered at the time of publication. Consult your Sherwin-Williams representative to obtain the most recent Product Data Information and Application Bulletin.

WARRANTY

The Sherwin-Williams Company warrants our products to be free of manufacturing defects in accord with applicable Sherwin-Williams quality control procedures. Liability for products proven defective, if any, is limited to replacement of the defective product or the refund of the purchase price paid for the defective product as determined by Sherwin-Williams. NO OTHER WARRANTY OR GUARANTEE OF ANY KIND IS MADE BY SHERWIN-WILLIAMS, EXPRESSED OR IMPLIED, STATUTORY, BY OPERATION OF LAW OR OTHERWISE, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.



RESUFLOR™ UVE ULTRAVIOLET EPOXY

PART B

GP3570A01 GP3570B01

CLEAR HARDENER

Revised: January 2, 2025

PRODUCT INFORMATION

SURFACE PREPARATION

CHECK THE CONCRETE: Concrete must be structurally sound and free of curing membrane, paint or other sealer. If you suspect that the concrete has been previously sealed, call Sherwin-Williams Company, technical support for further instructions.

CHECK FOR MOISTURE: Concrete must be dry before application of this floor coating material. Concrete moisture testing must occur. In-situ relative humidity testing is recommended. Readings must be below 75% relative internal concrete humidity. Test methods can be purchased at www.astm.org, see F2170, or follow manufacturer's instructions. If moisture issues are present, the use of a moisture mitigation system may be a consideration. Please call Sherwin-Williams Company Technical Support for further information / instructions.

NOTE: Although testing is critical, it is not a guarantee against future problems. This is especially true if there is no vapor barrier or the vapor barrier is not functioning properly and/or you suspect you may have concrete contamination from oils, chemical spills or excessive salts.

CHECK THE TEMPERATURE AND HUMIDITY: Floor temperature and materials should be between 65°F (18°C) and 85°F (29°C). Humidity must be less than 70% or the result may be a hazy appearance. DO NOT coat unless floor temperature is more than five degrees over the current, local dew point.

APPLICATION EQUIPMENT

- Protective clothing
- · Spiked shoes
- Jiffy mixer blade
- 60 grit sandpaper
- Slow speed drill (500 rpm or less)
- 18-24" Flat rubber squeegee 18-24" Notched rubber squeegee
- Roller assembly (18")
- Medium (3/8") nap roller (shed resistant)
- 80 grit sandpáper
- 100 grit sandpaper

ASSEMBLE EQUIPMENT: Due to the limited pot life of the material, all application equipment, etc. should be ready for immediate use. (Clean roller with tape to remove any residual lint.)

PREPARATION

Ensure concrete is free of dirt, grease, oil or other contaminants. Certain types of contaminant may interfere with coating adhesion and cause fisheyes or defect in the coating. Scrub with detergent, rinse with clean water, and allow to fully dry.

Concrete Preparation Options for Thin to Medium Film Applications (25 mils (0.63 mm) maximum):

Diamond Grind: (results of diamond grinding may vary depending on technique and the hardness of the concrete. Additional mils may be required). Sweep to remove large debris and vacuum to remove fine dust.

Light Blast: Use magnetic broom to remove excess shot, sweep to remove large debris and vacuum to remove fine dust.

PREPARATION (CONT'D)

Concrete Preparation options for Thick-Film Applications: Steel Shot Blast: Use magnetic broom to remove excess shot, sweep to remove large debris and vacuum to remove fine dust. Scarify: Sweep to remove large debris and vacuum to remove fine dust.

Filling Joints: Depending on the preference of the facility owner, joints may or may not be filled. If the joints are filled, non-moving joints, i.e. contraction or control joints, can be hard filled with thickened epoxy or with a semi-rigid joint filler such as Resuflor 3580. Construction joints less than one inch wide may also be filled with Resuflor 3580. Isolation or expansion joints must be filled with a flexible material designed for this purpose. Coating applied over filled joints may crack if there is concrete movement.

APPLICATION INSTRUCTIONS

A primer coat is needed when using Resuflor UVE as part of an epoxy system. A thin coat of Resuflor UVE may be used as a primer to wet out concrete, help seal off concrete pores and minimize outgassing bubbles. Apply a tight coat of primer with a clean, flexible squeegee. Backrolling is not recommended. There should be no mil build over the high spots of the concrete.

COVERAGE RATE will depend upon coating thickness. Much of this will soak into porous concrete. One gallon (3.78 litres) of Resuflor UVE will

535 ft² (49.70 m²) @ 3 mils (0.08 mm) wet/dry film 400 ft² (37.16 m²) @ 4 mils (0.10 mm) wet/dry film 321 ft² (29.82 m²) @ 5 mils (0.13 mm) wet/dry film

PREMIX PART A using a Jiffy mixer blade and slow speed drill. Pour out 2 gallons (7.56 litres) into a measuring container. Then, pour the measured Part A into a mixing pail.

COLORS: Premix Sherwin-Williams Colorants to ensure uniform color. Colorant is added to the Part A and mixed using a Jiffy mixer blade and slow speed drill. NOTE: When using colorant in the bulk units, add the colorant to the Part A that has been measured into the "mixing pail".

ADD RESUFLOR UVE PART B TO PART A (3 GALLONS / 11.34 LITRES TOTAL MIX). Pour out 1 gallon (3.78 litres) Part B into a measuring container that is separate from the one used with the Part A. Then, add the measured Part B to the Part A already in the mixing pail. POTLIFE: Mix only enough material which can be applied within the work time (time between the addition of Part B to Part A and the completion of all application actions). Check the following chart for work times at various temperatures. For smaller quantities, use 2 parts PART A to 1 part PART B by volume.

MIX FOR 2 MINUTES using a Jiffy mixer blade and slow speed drill. (Failure to do so could result in lower/diminished coating properties.)

IMMEDIATELY POUR ALL OF THE MIXED MATERIAL onto the floor in a single bead.

PUSH THE FLAT SQUEEGEE at an even speed with sufficient down pressure to apply the thinnest coat.



RESUFLOR™ UVE ULTRAVIOLET EPOXY

PART A PART B GP3570A01 GP3570B01

CLEAR HARDENER

Revised: January 2, 2025

PRODUCT INFORMATION

APPLICATION INSTRUCTIONS (CONT'D)

START THE SECOND AND REMAINING PASSES by pushing material parallel to the first stroke. Hold the bead of material near the center of the bar. NOTE: Resuflor UVE applied thin may "bridge" holes and cracks momentarily before soaking in--make sure the previously squeegeed area is overlapped (halfway). NOTE: The use of spiked shoes will allow freedom of movement on the wet floor.

TO REDUCE OUTGASSING BUBBLES, it is best to wait until the primer has set up enough to walk on before applying a build coat of Resuflor UVE. The primer does not need to be sanded if coated within 24 hours at floor temperatures 65°F-90°F (18°C-32°C).

If primer is not coated within 24 hours, it must be sanded with 60 grit paper. If primer is not coated within 24 hours, it must be saffued with objint paper. We recommend thorough sanding with a swing-type buffer so that multiple scratch marks cause an obvious gloss loss on all areas (depressions will remain shiny), and the floor is uniformly dulled. The ability to see individual scratch marks is an indication that sanding is not adequate. Scrub with detergent and rinse with clean water before coating.

BUILD COAT / GROUT COAT:

BUILD COAT / GROUT COAT:

COVERAGE RATE will depend upon required thickness. One gallon (3.78 litres) of Resuflor UVE will cover:

160 ft² (14.86 m²) @ 10 mils (0.25 mm) wet/dry film

107 ft² (9.94 m²) @ 15 mils (0.38 mm) wet/dry film

80 ft² (7.43 m²) @ 20 mils (0.51 mm) wet/dry film

NOTE: Total Resuflor UVE (prime and build coat) should not exceed

35 mils (0.89 mm).

REPEAT STEPS used for mixing and spreading of the primer coat A notched squeegee can be used to increase the thickness applied. *1/16" (1.59 mm) notched squeegee to apply 10-15 mils (0.25-0.38 mm) *1/8" (3.18 mm) notched squeegee to apply 15-20 mils (0.38-0.51 mm) *1/4" (6.35 mm) notched squeegee to apply more than 20 mils (0.51 mm) *These guidelines were arrived at by using new squeegees on smooth concrete with little applied pressure. The application rate is affected by worn squeegees, applied pressure and texture of the concrete.

Immediately after the Resuflor UVE is applied and there is room to roll, a second person will BACKROLL THE MATERIAL with a 3/8" roller to a smooth and uniform appearance. NOTE: Get off the Resuflor UVE as soon as possible.

ALLOW COATING TO CURE 24 hours at 75°F (24°C) before opening to light traffic. Allow more time at low temperatures or for heavier traffic. Full coating properties take 14 days to develop.

OPTIONAL APPLICATION OF ORANGE PEEL TEXTURE: IF ORANGE PEEL SURFACE IS DESIRED OR IF MATERIAL IS BEING USED AS PART OF A WALL SYSTEM, USE RESUFLOR UVE with fumed

The seal coating should be applied in multiple thin coats. The intent is to fill in any voids without leaving excessive milage on the surface.

COVERAGE RATE:

WALLS: A gallon (3.78 litres) of Resuflor UVE with fumed silica will cover: 267 ft² (24.8 m²) at 6 mils (0.15 mm) wet/dry film.

NOTE: Thickened Resuflor UVE applied greater than 6 mils (0.15 mm) may sag.

FLOORS: Agallon (3.78 litres) of Resuflor UVE with fumed silica will cover: 267 ft² (24.8 m²) at 6 mils (0.15 mm) wet/dry film maximum for unpigmented

NOTE: Unpigmented Resuflor UVE will dry "milky" if applied at more than 6 mils (0.15 mm).

APPLICATION INSTRUCTIONS (CONT'D)

PREMIX PART A using a Jiffy mixer blade and slow speed drill. Pour out 1 gallon (3.78 litres) into a measuring container. Then, pour the measured Part A into a mixing pail.

ADD APPROXIMATELY $1\!\!\!/_2$ GALLON FUMED SILICA to the measured Resuflor UVE Part A in the mixing pail. MIX UNTIL UNIFORM.

ADD RESUFLOR UVE PART B TO PART A (1.5 GALLONS / 5.67 LITRES TOTAL MIX). Pour out ½-gallon (1.89 litres) Part B into a measuring container that is separate from the one used with the Part A. Then, add the measured Part B to the thickened Part A already in the mixing pail. POTLIFE: Mix only enough material which can be applied within the work time (time between the addition of Part B to Part A and the completion of all application actions). Check the following chart for work times at various temperatures. For smaller quantities, use 2 parts A to 1 part B by volume.

APPROXIMATE WORK TIME (minutes) - °F (°C): 65 (18.3) 70 (21.1) 75 (23.9) 80 (26.7) 90 (32.2) 50 40 35 30 25

MIX FOR 2 MINUTES using a Jiffy mixer blade and slow speed drill. (Failure to do so could result in lower/diminished coating properties.)

WALLS: IMMEDIATELY POUR ALL OF THE MIXED MATERIAL into an application tray. DIP 3/8" (10 mm) ROLLER, SPREAD THE RESUFLOR UVE with fumed silica at 6 mils (0.15 mm) and backroll for a uniform finish.

IMMEDIATELY POUR ALL OF THE MIXED MATERIAL onto the floor in a single bead.

PUSH THE NOTCHED SQUEEGEE at an even speed with sufficient down pressure to apply the thinnest coat.

START THE SECOND AND REMAINING PASSES by pushing material parallel to the first stroke. Hold the bead of material near the center of the bar. NOTE: The use of spiked shoes will allow freedom of movement on the wet floor

Immediately after the Resuflor UVE is applied and there is room to roll, a second person will BACKROLL THE MATERIAL with a 3/8" roller to a uniform appearance. NOTE: Get off the Resuflor UVE with fumed silica as soon as possible.

APPLICATION OF ADDITIONAL COATINGS:

If Resuflor UVE is being topcoated with a Sherwin-Williams urethane except Resutile HPS 100 at floor temperatures of 65-90°F (18-32°C), it does not need to be sanded if applied within 24 hours. NOTE: This is a Sherwin-Williams solution only, DO NOT try this with competitive

SANDING REQUIRED:

Resuflor UVE must be thoroughly sanded if applying Resutile HPS 100 (see chart below).

Resuflor UVE must also be sanded if applying other Tennant urethanes

after 24 hours. Use 80 grit sandpaper except for Resutile HPS 100, WearGuard™-240 Gloss and Tennant CRU–use 100 grit sandpaper. The use of more aggressive paper will introduce deep grooves that will not be covered by a single, thin coat of urethane; swirl marks will be particularly evident if the topcoat is glossy. We recommend thorough sanding with a swing-type buffer so that multiple scratch marks cause an obvious gloss loss on all areas (depressions scratch marks cause an obvious gloss loss on all areas (depressions). will remain shiny), and the floor is uniformly dulled. The ability to see individual scratch marks is an indication that sanding is not adequate. Scrub with detergent and rinse with clean water before coating and tack rag to remove fine dust.



ACCELERA® 4850 POLYASPARTIC SS

GP4850 Part A PART B GP4850B01

SERIES HARDENER

Revised: November 19, 2024

PRODUCT INFORMATION

PRODUCT DESCRIPTION

ACCELERA 4850 Polyaspartic SS is a slower-set coating that gives applicators greater flexibility for flooring applications in a variety of markets. Its improved flow and leveling characteristics further minimize the potential for roller marks, enabling applicators to create a uniform, smooth finish - even on larger floors. Accelera 4850 polyaspartic technology offers a durable coating with excellent ultraviolet and weathering characteristics, as well as good chemical resistance that will cure at low temperatures.

Advantages

- Fast curing foot traffic in 6 hours
- Roller lines fade away
- 15-20 minute working time see Application Instructions
- Good chemical resistance, mechanical strength
- Low temperature cure
- High gloss finish

TYPICAL USES

Accelera 4850 is ideal for use in various coating applications where fast cure to service is desired.

- Acceptable for use in high performance architectural applications
- Suitable for use in USDA inspected facilities
- Suitable for use in Canadian food processing facilities
- Food & Beverage (e.g., processing areas, bathrooms, locker
- Pharmaceutical (e.g., processing areas, hallways, corridors, etc.)
- Healthcare
- General Industrial/Commercial (e.g., warehouses, automotive showrooms, etc.)
- Clean rooms

SURFACE PREPARATION

Surface must be clean, dry, and in sound condition. Remove all oil, dust, grease, dirt, loose rust, and other foreign material to ensure adequate adhesion.

Concrete: CSP-3

Epoxy Primer or Basecoat: Abrade with 60-80 grit

paper/screen

Existing Resinous Floor: Abrade with 36 grit paper/screen

APPLICATION CONDITIONS

35°F (1.7°C) minimum, 120°F (49°C) Temperature:

maximum (air, surface and material) At least 5°F (2.8°C) above dew point

(For lower temperature installation contact your Sherwin-Williams representative).

Relative humidity: 85% maximum

PRODUCT CHARACTERISTICS

Clear (A01), Standard, Safety Red (A66), Color:

Safety Yellow (A67), Ultradeep Tint Base

(T04) and Custom Colors

Sheen: Gloss Mix Ratio:

94% ± 2%, mixed (Calculated) 97% ± 2%, mixed (Calculated) Volume Solids: Weight Solids: VOC (EPA Method 24): <100 g/L mixed (unreduced)

Recommended Spreading Rate per coat:				
Minimum Maximui			imum	
Wet mils (microns):	6	(150)	15*	(375)*
Dry mils (microns):	5.6	(140)	14.1	(350)
~Coverage sq ft/gal (m²/L):	106	(2.7)	251	(6.2)

*Do not apply GP4850A01 (clear) at WFT over 10 mils (250 microns)

Drying Schedule @ 10 mils (250 microns) wet:

	@ 35°F (2°C)	@ //°F (25°C
Rel. Humidity	50%	55%
To Touch:	2 hours	1 hour
To Handle:	3 hours	2.5 hours

To Recoat:

minimum: 6 hours maximum: 36 hours

Cure to service:

3 hours Water resistance: Foot traffic: 6 hours Wheeled traffic: 24 hours

If maximum recoat time is exceeded, abrade surface with 36 grit paper or screen prior to recoating.

Drying time is temperature, humidity, and film thickness dependent. Pot life: 384 oz mass 20-25 minutes Working time: 15 minutes Sweat-in-time: None

Shelf Life:

Part A: 12 months, unopened Part B: 12 months, unopened Store indoors at 50°F (10°C) to 90°F (32°C)

Flash Point: 160 F° (71°C), PMCC or SETA, mixed

PERFORMANCE CHARACTERISTICS

Substrate: Concrete (CSP-3)

System Tested: 1 ct. epoxy primer/basecoat @ 10-12 mils dft

1 ct. Accelera 4850 @ 10-12 mils dft

Test Name	Test Method	Results
Abrasion Resistance	ASTM D 4060	80 m/g loss
Adhesion	ASTM D 4541	425 psi
Direct Impact Resistance	ASTM D 2794	100
Elongation	ASTM D 638	6%
Tensile Strength	ASTM D 638	6,400 psi
Flexibility 1/8" mandrel	ASTM D 1737	Pass
Hardness, Shore D	ASTM D 2240	69
Tear Strength	ASTM D 624	300 ibf/in



ACCELERA® 4850 POLYASPARTIC SS

PART A PART B **GP4850** GP4850B01

SERIES HARDENER

Revised: November 19, 2024

PRODUCT INFORMATION

APPLICATION INSTRUCTIONS

- 1. Add 2 parts resin and 1 part hardener by volume. Mix with low speed drill and Jiffy blade until uniform. Material can be reduced up to 10% in VOC restricted areas (≤100 g/L) with Acetone* for extended working time after mixing.
- 2. Apply Accelera 4850 at spread rate of 106-162 sq. ft. per gallon to yield 10-15 mils WFT using a squeegee. Back roll with a non shedding 3/8" or lower nap roller.

Note: Use dip and roll method in hot and humid conditions. Moisture in the air will accelerate the cure time. Do not exceed 10 minutes between batch to batch mixes to avoid changes at tie in. Use natural breaks to divide sections of the floor.

Required Tools: Drill, Jiffy blade, Squeegee, non shedding 3/8" or lower nap roller with solvent resistant core.

*Other areas (>100 g/L): use Acetone or R7K132 (Reducer No. 132). Choose a reducer that is compliant in your area. Confirm compliancé with state and local air quality rules before use.

RECOMMENDED SYSTEMS

NEGOMMENDED CTCTEMO			
		Dry Film Thio	ckness / ct. (Microns)
	ete (Polyaspartic): Accelera 4850	6.0-15.0	(150-375)
1 ct	ete (Epoxy Primer): Resuprime 3579 Accelera 4850	6.0-20.0 6.0-15.0	(150-500) (150-375)
1 ct	rete (Epoxy Top Coat): Resuflor 3746 Accelera 4850	6.0-10.0 6.0-15.0	(150-250) (150-375)

^{*}Resuprime 3579 must be abraded if Accelera 4850 has not been applied within the PDS specified recoat window. Use 60-80 grit paper/screen.

ORDERING INFORMATION

Part A: 1 gallon (3.78L) in a gallon (3.78L) container Packaging:

Part B: 1 gallon (3.78L) in a gallon (3.78L) container

 10.05 ± 0.3 lb/gal ; 1.20 Kg/L mixed, may vary by color Weight:

CHEMICAL RESISTANCE

For comprehensive chemical resistance information, consult the Chemical Resistant Guide and contact your Sherwin-Williams representative.

TINTING

Can be tinted with GIS and HPF Universal colorants. For Universal colorants use one pint per 1-gallon mix of GP4850A01 (Clear) for most colors, and two pints per 1-gallon mix for White, Bright Yellow, Light Gray, and Rotunda Red.

CLEANUP

Clean up mixing and application equipment immediately after use, in VOC restricted areas (VOC ≤25 g/L, or ≤3%) with Acetone**. Observe all fire and health precautions when handling or storing solvents.

**Cleanup: Other, less restrictive areas, use Acetone or MEK. Choose a cleaner that is compliant in your area. Confirm compliance with state and local air quality rules before use.

PERFORMANCE TIPS

- Coating is a fast cure material, mixing and installation crews must be organized accordingly.
- Light colors may require a second coat to achieve hiding.
- Slab on grade requires vapor/moisture barrier.
- Rapid cure. Do not mix more material than can be applied in 20-25 minutes.
- Strictly adhere to published coverage rates.
- This coating though resistant, is not a guarantee against tire staining. Vehicular tires from cars and trucks to tractors and boat trailers are varied and have the potential to leave a stain under certain conditions. Place rubber mats or carpet pieces under the tires to avoid the issue.

SAFETY

Refer to the SDS sheet before use.

Published technical data and instructions are subject to change without notice. Contact your Sherwin-Williams representative for additional technical data and instructions.

MAINTENANCE

Occasional inspection of the installed material and spot repair can prolong system life. For specific information, contact your Sherwin-Williams representative.

DISCLAIMER

The information and recommendations set forth in this Product Data Sheet are based upon tests conducted by or on behalf of The Sherwin-Williams Company. Such information and recommendations set forth herein are subject to change and pertain to the product offered at the time of publication. Consult your Sherwin-Williams representative to obtain the most recent Product Data Information and Application Bulletin.

WARRANTY


The Sherwin-Williams Company warrants our products to be free of manufacturing defects in accord with applicable Sherwin-Williams quality control procedures. Liability for products proven defective, if any, is limited to replacement of the defective product or the refund of the purchase price paid for the defective product as determined by Sherwin-Williams. NO OTHER WARRANTY OR GUARANTEE OF ANY KIND IS MADE BY SHERWIN-WILLIAMS, EXPRESSED OR IMPLIED, STATUTORY, BY OPERATION OF LAW OR OTHERWISE, INCLUDING MER-CHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

^{**}Resuflor 3746 must be abraded if Accelera 4850 has not been applied within the PDS specified recoat window. Use 60-80 grit paper/screen.

RESUFLOR[™] **DECO FLAKE DQF**

Sherwin-Williams Resuflor Deco Flake DQF System

is a high-strength floor covering with a unique mosaic appearance, created with the use of two different types of decorative broadcast media and high-performance epoxy coatings. The first broadcast is an application of decorative quartz, while the second broadcast utilizes decorative flake. The flake and quartz aggregates are available in a variety of standard and custom colors/blends to complement virtually any facility décor.

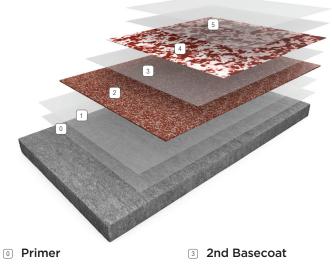


- 1 1st Basecoat
- 2 1st Broadcast -**Colored Quartz**
- 4 2nd Broadcast -Colored Flake
- **5** Grout and Topcoat

BENEFITS

- Aesthetically pleasing appearance
- Limitless color options
- · Seamless and sanitary
- · Chemical- and stain-resistant
- · High-gloss finish
- Contributes to LEED® v4 credits

USES

- · Nursing homes and healthcare facilities
- · Clean rooms and pharmaceutical facilities
- · Retail and office buildings
- · Locker rooms and restrooms
- · Schools and universities
- Stadiums and hospitality venues

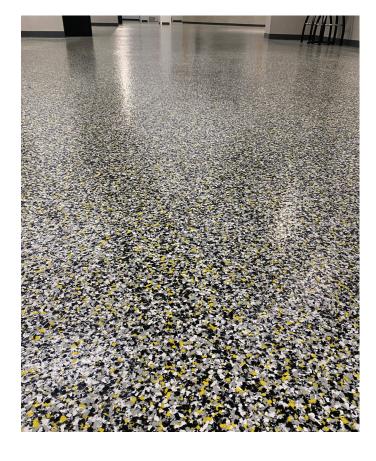

FEATURED COLORS







Ocelot



Almond Milk



Agave



Kingsnake



Korat



Chinchilla



Limestone



Greyhoun



Black Bea



Speckled Ash



Moon

Unlimited standard and custom blends available. Please see Resuflor™ Deco Flake DQF Color Cards for the extensive collection of standard blends or use our Flooring Visualizer Tool to create your own custom blend at floorvisualizer.sherwin-williams.com. This reproduction approximates the actual color. Factors such as the type of product, degree of gloss, texture, size and shape of area, lighting, heat or method of application may cause color variance. Contact your Sherwin-Williams representative for details.

ABOUT CHEMICAL RESISTANCE

Sherwin-Williams High Performance Flooring offers a broad range of systems to accommodate nearly every industrial, commercial and institutional setting. Each flooring system includes a standard chemical-resistant topcoat or surface proven to perform under typical conditions.

Important considerations:

- The combination of cleaning solutions, sanitizing chemicals, processing substances and products found in any operational setting is unique.
- Knowing exactly which materials are present as well as their concentrations and typical exposure times before cleanup – is critical for proper flooring system selection.
- During the specification process, a flooring system's standard chemical-resistant topcoat may get replaced with one better suited to unique facility conditions.

The ability of a flooring system to perform as designed relies heavily on proper selection. Matching each use case with the right chemical-resistant flooring is key to a having a facility looking great and functioning at peak level over the long term.

See our Chemical Resistance Guide and other technical resources on our website. Connect with a Sherwin-Williams High Performance Flooring expert for help with specifying an optimal flooring system for your facility.

TYPICAL PHYSICAL PROPERTIES

Color	Standard and custom color blends available
Abrasion Resistance ASTM D 4060, CS-17 Wheel, 1,000 cycles	80-90
Compressive Strength ASTM D695	13,500 psi
Adhesion ASTM D4541	450 psi concrete failure
Adhesion ASTM D7234	732 psi concrete failure
Shore D Hardness ASTM D2240	80-85 @ 0 sec 75-80 @ 15 sec
Tensile Strength ASTM D2370	8,000 psi
Percent Elongation (topcoat resin) ASTM D2370	5%
Flammability	Self-extinguishing over concrete
ASTM D635	182 mm/min

THE SHERWIN-WILLIAMS DIFFERENCE

Sherwin-Williams High Performance Flooring delivers world-class industry subject matter expertise, unparalleled technical and specification service, and unmatched regional commercial team support to our customers around the globe.

United States & Canada

RESUFLOR DECO FLAKE DQF

The following information is to be used as a guideline for the installation of the Resuflor Deco Flake DQF flooring system. Contact the Sherwin-Williams Technical Service Department for assistance prior to application.

APPLICATION INFORMATION – SURFACE PREP PROFILE CSP 1-3

VOC MIXED	APPLICATION STEP	MATERIAL	MIX RATIO	THEORETICAL COVERAGE	PACKAGING
<50 g/L	Optional Primer	Resuflor MPE	2:1	321-535 sq ft/gal	3, 15, 165 or 750 gals
<50 g/L	1st Basecoat	Resuflor MPE	2:1	133-160 sq ft/gal	3, 15, 165 or 750 gals
0 g/L	Broadcast	5900F Colored Quartz	Broadcast	0.4-0.5 lbs/sq ft	50 lbs
<50 g/L	2nd Basecoat	Resuflor MPE	2:1	107 sq ft/gal	3, 15, 165 or 750 gals
0 g/L	Broadcast	6750/6755 Flake	Broadcast	0.2 lbs/sq ft	25 or 50 lbs
<50 g/L	Grout Coat	Resuflor UVE	2:1	107 sq ft/gal	15 gals
<50 g/L	Topcoat	Resuflor UVE	2:1	107 sq ft/gal	15 gals

ALTERNATE SYSTEM #1

<50 g/L	1st Basecoat	Resuflor MPE	2:1	133-160 sq ft/gal	3, 15, 165 or 750 gals
0 g/L	Broadcast	5900F Colored Quartz	Broadcast	0.4-0.5 lbs/sq ft	50 lbs
<50 g/L	2nd Basecoat	Accelera 4850	2:1	60-70 sq ft/gal	3 gals
0 g/L	2nd Broadcast	6750/6755 Flake	Broadcast	0.2 lbs/sq ft	25 or 50 lbs
<50 g/L	Grout Coat	Accelera 4850	2:1	80-100 sq ft/gal	3 gals
<50 g/L	Topcoat	Accelera 4850	2:1	105-160 sq ft/gal	3 gals

INSTALLATION

Sherwin-Williams High Performance Flooring materials shall only be installed by approved contractors. The following information is to be used as a guideline for the installation of the Resuflor Deco Flake DQF. Contact the Sherwin-Williams Technical Service Department for assistance prior to application.

SURFACE PREPARATION - GENERAL

Sherwin-Williams systems can be applied to a variety of substrates if the substrate is properly prepared. Preparation of surfaces other than concrete will depend on the type of substrate, such as wood, concrete block, quarry tile, etc. Should there be any questions regarding a specific substrate or condition, please contact the Sherwin-Williams Technical Service Department prior to starting the project. Refer to Surface Preparation Form G-1.

SURFACE PREPARATION - CONCRETE

Concrete surfaces shall be abrasive blasted to remove all surface contaminants and laitance. The prepared concrete shall have a surface profile depending upon system selected. Refer to Form G-1.

After initial preparation has occurred, inspect the concrete for bug holes, voids, fins and other imperfections. Protrusions shall be ground smooth while voids shall be filled with a system-compatible filler. For recommendations, consult the Sherwin-Williams Technical Service Department.

TEMPERATURE

Throughout the application process, substrate temperature should be 50-90°F. Substrate temperature must be at least 5°F above the dew point. Applications on concrete substrate should occur while temperature is falling to lessen offgassing. The material should not be applied in direct sunlight, if possible. Protect material from freezing prior to installation.

GENERAL PRODUCT INFORMATION

OPTIONS:

Colors in Resuflor MPE and Resuflor UVE: Use colorants at a rate of one unit per 3-gallon mix. Standard colorants – White, Yellow, Light Gray and Rotunda Red will not impart total hide. Use these colorants at a rate of two units per 3-gallon mix. Similar colorants also may not hide as well. Refer to Color Selection Guide or consult Sherwin-Williams Technical Support. NOTE: Even though the background coat is an ultraviolet-resistant epoxy, Light Gray and White may show yellowing over time. NOTE: Very dark colors like Battleship Gray and Steel Gray are not recommended as they create a background that is too dark.

Cove: A seamless, smooth transition can be created between the flooring and wall. Call technical support for assistance.

LIMITATIONS

Contamination (Fisheyes): Product may fisheye if oil, silicones, mold release agents or other contaminants are present.

OPTIONAL PRIMER - RESUFLOR MPE

A thin coat of primer will wet out the concrete, help seal off concrete pores and minimize outgassing bubbles. Apply a tight coat of primer with a clean, flexible squeegee. Backrolling is not recommended. There should be no mil build over the high spots of the concrete. For the optional primer application, follow instructions for mixing and application of the Resuflor MPE base coat, skipping the backrolling step.

COVERAGE RATE: Much of the primer coat will soak into porous concrete. One gallon of Resuflor MPE will cover:

535 square feet at 3 mils wet/dry film

400 square feet at 4 mils wet/dry film

321 square feet at 5 mils wet/dry film

1ST BASE COAT - RESUFLOR MPE

A thin coat of primer will wet out the concrete substrate, help seal off concrete pores and minimize outgassing bubbles. Apply a tight coat of primer with a clean, flexible squeegee. Backrolling is not recommended. There should be no mil build over the high spots of the concrete. **NOTE:** If faster cure times are required, use Resuflor 3746 FC.

COVERAGE RATE: Much of this will soak into porous concrete. One gallon of Resuflor MPE will cover:

160 square feet at 10 mils wet/dry film

145 square feet at 11 mils wet/dry film

133 square feet at 12 mils wet/dry film

PREMIX PART A using a Jiffy® mixer blade and slow speed drill. (This is required for both 3-gallon and full-filled 5-gallon containers). For full-filled 5-gallon pails, pour out 2 gallons into a measuring container.

Then, pour the measured Part A into a mixing pail.

COLORS: Premix colorants to ensure uniform color. Colorant is added to the Part A and mixed using a Jiffy® mixer blade and slow speed drill. **NOTE:** When using colorant in the bulk units, add the colorant to the Part A that has been measured into the "mixing pail." Pre-pigment the primer the same color that the seed coat of Resuflor MPE will be to help with hide.

ADD RESUFLOR MPE PART B TO PART A (3 GALLONS). For full-filled 5-gallon pails, pour out 1 gallon Part B into a measuring container that is separate from the one used with the Part A. Then, add the measured Part B to the Part A already in the mixing pail. **POTLIFE:** Mix only enough material that can be applied within the work time (time between the addition of Part B to Part A and the completion of all application actions). Check the following chart for work times at various temperatures. For smaller quantities, use 2 parts Part A to 1 part Part B by volume.

Approximate work time:

65°F	70°F	75°F	80°F	90°F
40 min	30 min	25 min	20 min	15 min

MIX FOR 2 MINUTES using a Jiffy® mixer blade and slow speed drill. (Failure to do so could result in lower/diminished coating properties.)

IMMEDIATELY POUR ALL OF THE MIXED MATERIAL onto the floor in a single bead.

PUSH THE FLAT SQUEEGEE at an even speed with sufficient down pressure to apply the thinnest coat. NOTE: The use of spiked shoes will allow freedom of movement on the wet floor. CAUTION: The surface will be slippery.

START THE SECOND AND REMAINING PASSES by pushing material parallel to the first stroke. Hold the bead of material near the center of the bar. NOTE: Resuflor MPE applied thin may "bridge" holes and cracks momentarily before soaking in — make sure the previously squeegeed area is overlapped (halfway).

TO REDUCE OUTGASSING BUBBLES, it is best to wait until the primer has set up enough to walk on before applying the seed coat of Resuflor MPE. The primer must be coated within 24 hours at floor temperatures 65-90°F.

1ST BROADCAST - DECORATIVE QUARTZ

IMMEDIATELY BROADCAST TO EXCESS WITH DECORATIVE QUARTZ into the uncured Resulfor MPE resin on the floor. Do not dump or pile the material. Gently scatter it onto the floor by hand tossing so as to cover the wet resin completely. **NOTE:** It is important that epoxy is not visible (no wet or shiny areas) after quartz settles, because any visible epoxy will yellow. A coverage rate of 0.4 to 0.5 pounds per square feet of quartz is recommended.

ALLOW SYSTEM TO CURE 8-10 hours at 75°F.

THOROUGHLY SWEEP AND VACUUM to remove loose colored quartz from surface. NOTE: DO NOT save and reuse swept and vacuumed colored quartz or flake unless you have taken extra precautions.

2ND BASE COAT - RESUFLOR MPE

One gallon of Resuflor MPE will cover:

107 square feet at 15 mils wet/dry film

REPEAT STEPS used for mixing and spreading of the first base coat.

2ND BROADCAST - DECORATIVE FLAKE

IMMEDIATELY BROADCAST TO EXCESS WITH DECORATIVE FLAKE into the uncured Resuflor MPE resin on the floor. Do not dump or pile the material. Gently scatter it onto the floor by hand tossing so as to cover the wet resin completely. NOTE: It is important that epoxy is not visible (no wet or shiny areas) after flake settles, because any visible epoxy will yellow. A coverage rate of 0.2 pounds per square feet of flake is recommended.

ALLOW SYSTEM TO CURE 8-10 hours at 75°F.

THOROUGHLY SWEEP AND VACUUM to remove loose colored quartz or flake from surface. NOTE: DO NOT save and reuse swept and vacuumed colored quartz or flake unless you have taken extra precautions.

GROUT COAT - RESUFLOR UVE

COVERAGE RATE: A gallon of Resuflor UVE will cover:

107 square feet at 15 mils wet/dry film

100 square feet at 16 mils wet/dry film

PREMIX PART A using a Jiffy® mixer blade and slow speed drill. Pour out 2 gallons into a measuring container. Then, pour the measured Part A into a mixing pail.

ADD RESUFLOR UVE PART B TO PART A (3 GALLONS TOTAL MIX). Pour out 1 gallon Part B into a measuring container that is separate from the one used with the Part A. Then, add the measured Part B to the Part A already in the mixing pail. POTLIFE: Mix only enough material that can be applied within the work time (time between the addition of Part B to Part A and the completion of all application actions). Check the following chart for work times at various temperatures. For smaller quantities, use 2 parts Part A to 1 part Part B by volume.

Approximate work time:

65°F	70°F	75°F	80°F	90°F
40 min	30 min	25 min	20 min	15 min

MIX FOR 2 MINUTES using a Jiffy® mixer blade and slow speed drill. (Failure to do so could result in lower/diminished coating properties.)

IMMEDIATELY POUR ALL OF THE MIXED MATERIAL onto the floor in a single bead.

PUSH THE FLAT SQUEEGEE at an even speed and down pressure to apply the desired thickness. NOTE: The use of spiked shoes will allow freedom of movement on the wet floor.

BACKROLL THE MATERIAL with a 3/8" nap roller for a smooth, uniform appearance. Backrolling is required to remove the puddles and squeegee lap marks in order to obtain uniform texture and a consistent mil thickness. NOTE: Get off the Resuflor UVE as soon as possible.

The topcoat of Resuflor UVE must be applied at floor temperatures of 65-90°F (within 24 hours).

TOPCOAT – RESUFLOR UVE

COVERAGE RATE: One gallon of Resuflor UVE will cover:

200 square feet at 8 mils wet/dry film

REPEAT STEPS used for mixing and spreading of the grout coat.

ALLOW COATING TO DRY 24 HOURS at 75°F, 50% relative humidity, before opening to light traffic. Allow more time at low temperatures, low humidity or for heavier traffic. Full coating properties take 7-14 days to develop.

CLEANUP

Clean up mixing and application equipment immediately after use. Use toluene or xylene. Observe all fire and health precautions when handling or storing solvents.

SAFETY PRECAUTIONS

Refer to the SDS before use. Published technical data and instructions are subject to change without notice. Contact your Sherwin-Williams representative for additional technical data and instructions.

MATERIAL STORAGE

Store materials in a temperature-controlled environment of 50-90°F and out of direct sunlight. Keep resins, hardeners and solvents separated from each other and away from sources of ignition.

MAINTENANCE

Occasional inspection of the installed material and spot repair can prolong system life. For specific information, contact the Sherwin-Williams Technical Service Department.

DISCLAIMER

The information and recommendations set forth in this document are based upon tests conducted by or on behalf of The Sherwin-Williams Company. Such information and recommendations set forth herein are subject to change and pertain to the product offered at the time of publication.

Consult www.sherwin-williams.com/resin-flooring to obtain the most recent product data information and application instructions.

WARRANTY

The Sherwin-Williams Company warrants our products to be free of manufacturing defects in accord with applicable Sherwin-Williams quality control procedures. Liability for products proven defective, if any, is limited to replacement of the defective product or the refund of the purchase price paid for the defective product as determined by Sherwin-Williams.

NO OTHER WARRANTY OR GUARANTEE OF ANY KIND IS MADE BY SHERWIN-WILLIAMS, EXPRESSED OR IMPLIED, STATUTORY, BY OPERATION OF LAW OR OTHERWISE, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

THE SHERWIN-WILLIAMS DIFFERENCE


Sherwin-Williams High Performance Flooring delivers world-class industry subject matter expertise, unparalleled technical and specification service, and unmatched regional commercial team support to our customers around the globe.

United States & Canada

DECO FLAKE - 1/8" FLAKE

RESILIENT DECORATIVE FLOORING


Deco Flake systems combine multi-colored vinyl chips with resin to bring depth and interest to floor designs. The chips can be fully broadcast or lightly sprinkled as an accent. These affordable, attractive and customizable resinous floor solutions are ideal for educational, healthcare, retail and other commercial environments.

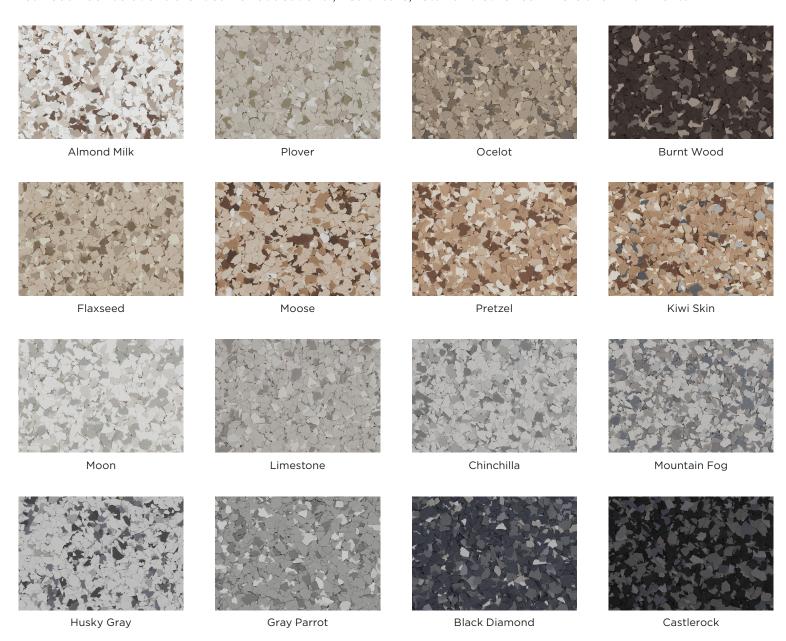

COLOR CARD

DECO FLAKE - 1/8" FLAKE


RESILIENT DECORATIVE FLOORING

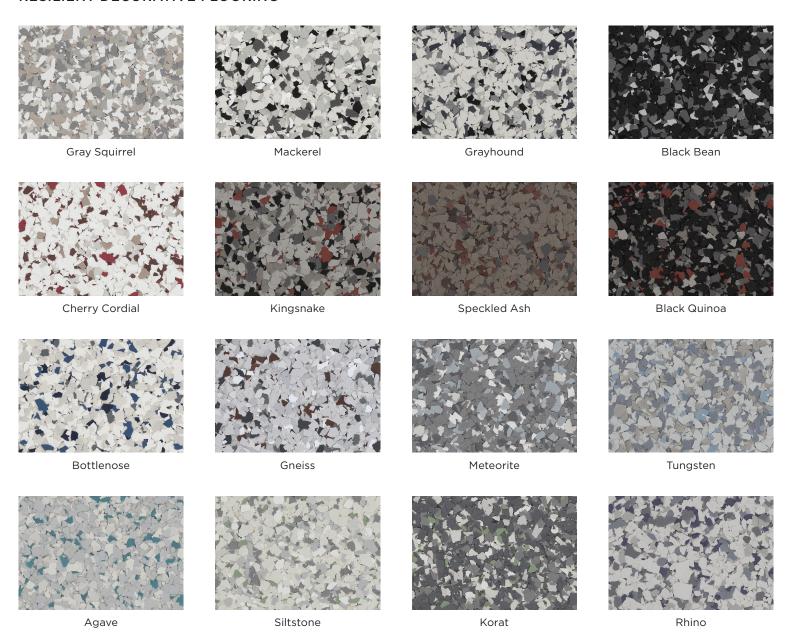

DECO FLAKE - 1/4" FLAKE


DECORATIVE RESINOUS FLOORING

Deco Flake systems combine multi-colored vinyl chips with resin to bring depth and interest to floor designs. The chips can be fully broadcast or lightly sprinkled as an accent. These affordable, attractive and customizable resinous floor solutions are ideal for educational, healthcare, retail and other commercial environments.

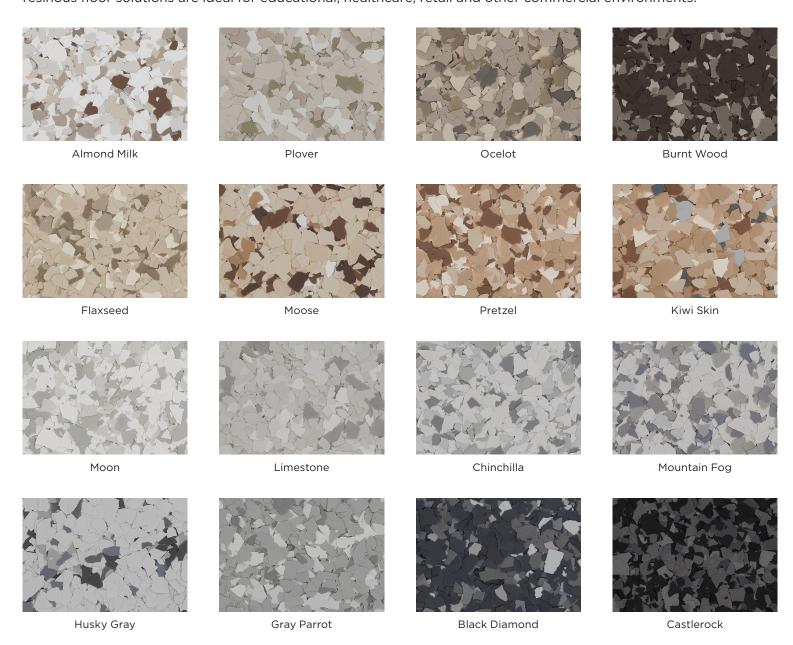

DECO FLAKE - 1/4" FLAKE

DECORATIVE RESINOUS FLOORING

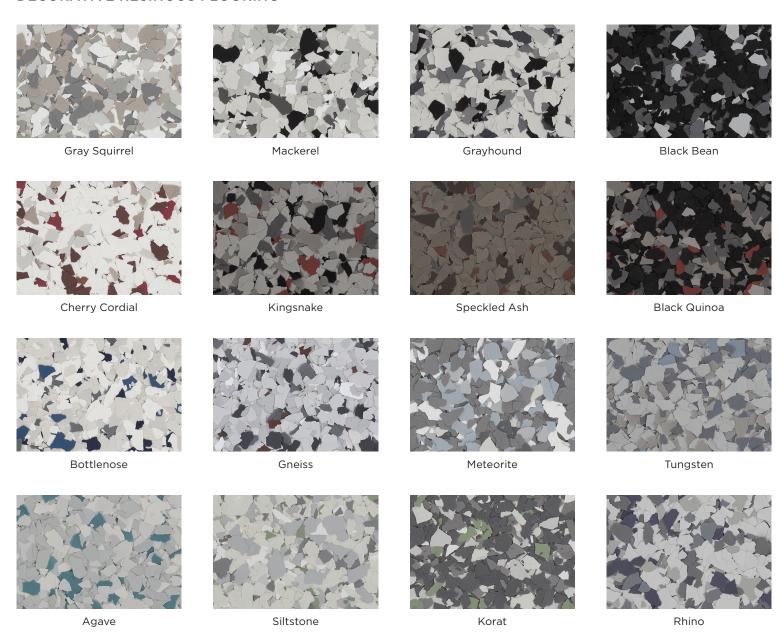



GUIDELINE INSTRUCTIONS FOR CONCRETE SURFACE PREPARATION (FORM G-1, REVISED 04/25)

INTRODUCTION

The following concrete surface preparation guidelines serve as an aid to owners, design professionals, specifiers and contractors. All surfaces to receive Sherwin-Williams High Performance Flooring sealers, coatings, mortars and resurfacers must be structurally sound and clean. Proper surface preparation is an extremely important factor in the immediate and long-term successful performance of applied polymer floor or wall systems.

The contractor responsible for the installation of the polymer system shall be provided a substrate that is clean, durable, flat, pitched to specifications and free of surface contaminants. Providing the properly prepared substrate is the responsibility of the owner, the owner's appointed representative and the concrete contractor, unless specifically stated otherwise.

PROPER SURFACE PREPARATION

Proper surface preparation includes the following:

- 1. Inspection of the concrete substrate
- 2. Removal and replacement of non-durable concrete
- 3. Decontamination of the concrete surface
- 4. Creation of surface profile
- 5. Repair of surface irregularities
- 1. Inspection of the concrete substrate to determine its general condition, soundness, presence of contaminants, presence of moisture vapor emissions and the best methods to use in preparation of the surface to meet the requirements of the owner or the owner's appointed representative is critical. A proper evaluation will lead to the selection of the proper tools and equipment to accomplish the objective.
- 2. Removal and replacement of non-durable concrete must be accomplished prior to installation of the polymer system. Localized weak or deteriorated concrete must be removed to sound concrete and replaced with either cementitious or polymer concrete repair mortars or an engineered concrete mix design. For application of these systems and compatibility with the selected polymer sealer, coating, lining or topping, refer to the appropriate application guide or the Technical Service Department. Occasionally, plain fresh concrete is required and must be bonded to existing concrete. When bonding fresh concrete to existing, prepare the existing concrete surface by scabbling, scarifying, abrasive (sand) blasting, needle scaling, high-pressure water jetting (5,000-45,000 psi), or steel shot blasting. Apply a low modulus epoxy as the bonding agent at a rate of 80 square feet per gallon for a WFT of 20 mils, and then place the fresh concrete or mortar. Bonding to lightweight concrete may require a second coat of epoxy if the first coat is readily absorbed into the concrete surface. Always place the fresh concrete within the open time of the epoxy, while the epoxy-bonding agent is still wet. Rough concrete surfaces will require additional material depending on the surface profile. Fresh concrete should have a low water/cement ratio (w/c) not to exceed 0.40. When bonding fresh concrete containing latex polymer admixtures, check compatibility of the latex modified concrete mixture by either installing a test patch and performing a pull-off test, or by conducting a slant shear test in accordance with ASTM C882 in an independent concrete testing laboratory.

SURFACE PREPARATION



3. Decontamination of the concrete surface requires the removal of oils, grease, wax, fatty acids and other contaminants, and may be accomplished by the use of detergent scrubbing with a heavy duty cleaner/degreaser, low-pressure water cleaning (less than 5,000 psi), steam cleaning or chemical cleaning. The success of these methods is dependent upon the depth of penetration of the contaminant, which is completely dependent upon the contaminant's viscosity, the concrete's permeability and the duration of exposure. Special care should be taken when preparing concrete at an "in use" facility for repair, replacement or an initial floor topping. This is especially true for food processing facilities. Contaminants can be carried into exposed concrete, as most of these facilities use copious amounts of water. The contaminants can be animal fats/oils, blood, cleaning solutions, microbes, etc. They may not be completely removed during preparation (shot blasting or grinding) even though the concrete may appear clean and well profiled.

A simple method to ensure you have sound concrete is to test the pH. The chemistry of concrete is alkaline in nature. Normal concrete should be in the range of 11-13. Most of the contaminants mentioned are neutral to acidic in nature. After preparation, test the floor in multiple locations using distilled water and the pH paper. If the pH is 10 or lower, additional preparation will be required to ensure a good bond. In areas where the contaminants cannot be removed, the contaminated concrete must be removed and replaced as in Step 2 above.

Caution: Decontamination methods that introduce large amounts of water may contribute to moisture-related problems as referenced in APPENDIX A.

4. Creation of surface profile can be accomplished by a number of methods, each utilizing a selection of tools, equipment and materials to accomplish the intended purpose (See METHODS OF SURFACE PREPARATION below). Selection is dependent upon the type of surface to be prepared and the type of system to be installed. In addition, floors, walls, ceilings, trenches, tanks and sumps each have their own particular requirements. The type and thickness of the selected polymer system also plays an important role in the selection process. Regardless of the method selected or tools employed, we must provide a surface that will accept the application of polymer-based products and allow the secure mechanical bond of the polymer to the concrete. The type of service the structure will be subjected to will also help to define the degree of profile required. The surface profile is the measure of the average distance from the peaks of the surface to the valleys as seen through a cross-sectional view of the surface of the concrete.

This dimension is defined pictorially and through physical samples in the ICRI Technical Guideline No. 310.2, and is expressed as a Concrete Surface Profile number (CSP 1-10).

- For Sherwin-Williams High Performance Flooring coating and sealing applications from 4-15 mils in thickness, the surface profile shall be CSP 1, 2 or 3, typically accomplished through decontamination of the concrete surface as defined in Step 3 above, followed by acid etching, grinding or light shot blast.
- For Sherwin-Williams Resuflor™ Topfloor and other coating applications from 15-40 mils in thickness, the surface profile shall be CSP 3, 4 or 5, typically accomplished through decontamination of the concrete surface as defined in Step 3 above, followed by light shot blast, light scarification or medium shot blast.
- For Sherwin-Williams Resuflor Deco Quartz, Resuflor Topfloor SL23, Resuflor Topfloor SL12 SD, Resuflor Topcoat
 Metallic, Resuflor Aqua Topfloor, Resuflor Aqua MCS, Poly-Crete® SLB and other topping applications from
 40 mils-1/8", the surface profile shall be CSP 4, 5 or 6. These are typically accomplished through decontamination of
 the concrete as defined in Step 3 above, followed by light scarification, medium shot blast or medium scarification.
- For Sherwin-Williams terrazzo systems, Resuflor Screed, Poly-Crete MD, Poly-Crete HF and other topping applications greater than 1/8", the surface profile shall be CSP 5, 6, 7, 8 or 9. These are typically accomplished through decontamination of the concrete as defined in Step 3 above, followed by medium shot blast, medium scarification, heavy abrasive blast, scabbling or heavy scarification.



5. Repair of surface irregularities including bugholes, spalls, cracks, deteriorated joints, slopes, areas near transition zones such as around drains and doorways, etc., must be repaired prior to the placement of the polymer system and/or the system must be designed to offset the thickness of the irregularities. For removal and replacement information and materials, refer to Step 2 above. For bugholes and other minor surface irregularities, fill with epoxy quick patch Resuflor 3500, Resuflor 3513 Instant Patch Resin or the system resin mixed with a vertical grade aggregate. For treatment of cracks and joints, refer to the section below entitled "Crack Isolation." For additional questions, contact the Technical Service Department or your local sales representative for specific recommendations.

For specific applications, always consult Sherwin-Williams System Overviews, Application Guides, data sheets or a Technical Service representative.

METHODS OF SURFACE PREPARATION

Depending upon conditions of the concrete, one or more methods of surface preparation may be required. It is common for decontamination to precede mechanical preparation, and if necessary a second decontamination to follow.

The preferred methods for creation of a surface profile, including the removal of dirt, dust, laitance and curing compounds, are steel shot blasting, abrasive (sand) blasting or scarifying. The steel shot blasting or vacuum blasting process is commonly referenced by equipment brand names, such as Blastrac, Vacu-Blast, Shot-Blast, etc. Vertical and overhead surfaces, such as cove base, wall and ceiling surfaces, shall be prepared utilizing methods of grinding, scarifying, abrasive (sand) blasting, needle scaling, high-pressure water jetting (5,000-45,000 psi) or vertical steel shot blasting.

Caution: The use of high-pressure water jetting will introduce large amounts of water, which may contribute to moisture-related problems as referenced in APPENDIX A. The following table provides a guide for the degree of surface profile required for the coating or overlay to be applied and the preparation methods used to generate each profile.

APPLICATION	PROFILE	SURFACE PREPARATION METHOD
SEALERS	0-3 mils	Detergent Scrub Low-pressure Water Acid Etching (not recommended) Grinding
THIN FILM	4-10 mils	Acid Etching (not recommended) Grinding Abrasive Blast Steel Shot Blast
HIGH-BUILD	10-40 mils	Abrasive Blast Steel Shot Blast Scarifying



APPLICATION	PROFILE	SURFACE PREPARATION METHOD
SELF-LEVELING	50 mils-1/8 inch	Abrasive Blast Steel Shot Blast Scarifying
POLYMER OVERLAY	1/8-1/4 inch	Abrasive Blast Steel Shot Blast Scarifying Needle Scaling High/Ultra-High Pressure Water Jetting Scabbling Flame Blasting Milling/Rotomilling

Surfaces to receive the bonded polymer system must be inspected after the surface is prepared to ensure that the substrate is sound and structurally durable. Areas found to be unsound or non-durable must be removed and replaced as described in Step 2 above. Dust or other deleterious substances not removed after the initial surface preparation must be vacuumed, leaving the surface dust free and clean.

Other surface preparation methods are mentioned in Additional Surface Preparation References below.

CRACK ISOLATION

The performance of elastomeric products such as Resuflor 3555 or Resuflor EOC internally flexible epoxy requires a relatively uniform dry film thickness to resist drying shrinkage and thermal movement of the concrete while maintaining a seamless bridge or seal over the concrete. Therefore it is critical that all mortar splatter, protrusions, ridges, penetrations or sharp projections in the surface of the concrete be ground smooth or otherwise made smooth, in addition to the normal surface preparation outlined above.

Prior to application of an elastomeric system, control/contraction joints, construction joints and cracks should be sealed with the selected system flexible sealant, i.e., Resuflor 3580 joint and crack filler. This coating should extend a minimum of 6" on either side of the joint or crack. The entire surface area should then receive the specified crack isolation system. Isolation and/or expansion joints should be detailed in accordance with the plans and specifications of an architectural or engineering design professional for the type of structure being considered. Consult the Technical Service Department for the proper selection and use of isolation materials and the potential use of fiberglass scrim cloth for additional crack bridging capabilities.

Note: Sherwin-Williams High Performance Flooring systems can be applied to a variety of substrates if the substrate is properly prepared. Preparation of surfaces other than concrete or steel, such as wood, concrete block, brick, quarry tile, glazed tile, cement terrazzo, vinyl composition tile, plastics and existing polymer systems, can be accomplished to receive bonded polymer sealers, coatings or toppings. For questions regarding a substrate other than concrete or steel, or a condition not mentioned in this Guideline, contact the Technical Service Department prior to starting the project.



ADDITIONAL SURFACE PREPARATION REFERENCES

Important and relevant information on surface preparation of concrete is available by referencing the following codes, standards and guidelines.

	ADDITIONAL SURFACE PREPARATION REFRENCES
АМРР	Association for Materials Protection and Performance, 800 Trumbull Drive, Pittsburgh, PA 15205, (412) 281-2331 • SSPC-SP 13 Surface Preparation of Concrete • SSPC-TU 2/NACE 6G197 Design, Installation, and Maintenance of Coating Systems for Concrete Used in Secondary Containment
ICRI	 International Concrete Repair Institute, 38800 Country Club Drive, Farmington Hills, MI 48331, (248) 848-3809 Technical Guideline No. 310.2, "Selecting and Specifying Concrete Surface Preparation for Sealers, Coatings, and Polymer Overlays" Includes visual standards to act as a guide in defining acceptable surface profiles for the application of industrial coatings and polymer floor toppings. Technical Guideline No. 03730, "Guide for Surface Preparation for the Repair of Deteriorated Concrete Resulting from Reinforcing Steel Corrosion"
ASTM	American Society for Testing and Materials, 100 Barr Harbor Drive, West Conshohocken, PA 19428-2959, (610) 832-9585 • ASTM D4258 "Practice for Surface Cleaning Concrete for Coating" • ASTM D4260 "Standard Practice for Acid Etching Concrete" • ASTM D4261 "Practice for Surface Cleaning Unit Masonry for Coating" • ASTM D4262 "Test Method for pH of Chemically Cleaned or Etched Concrete Surfaces"

APPENDIX A: TESTING FOR MOISTURE VAPOR EMISSION FROM CONCRETE

Excess moisture in concrete can produce harmful effects of discoloration, interruption of the polymerization of products, and delaminating of non-permeable resinous systems. Sources of moisture fall into three distinct categories: moisture present at the surface prior to or during application, moisture within the concrete that attempts to escape during and after application and a distinct source of moisture in intimate contact with the concrete that provides a continuous supply of moisture. Avoiding moisture-related problems and understanding the options available for remediation once they occur is important. Detecting moisture in concrete may be accomplished by employing a number of methods briefly described below:

Relative Humidity Method BS 8201 and BS 5325 - These are British Standards that result in pass/fail of whether or not moisture is being emitted, but do not quantify the results. This is not a useful test.

Gel-B Bridge Test - This test measures electrical resistance of the concrete, but is dependent not only on the moisture content of the concrete, but also on the other constituents of the concrete. Calibration of the results obtained with this method depend on knowing the mix design of the concrete and the raw material used. At best it is a difficult interpretation.

Radio Frequency (Capacitance-Impedance) Method - This method relies on portable electronic moisture meters that transmit strong radio waves that are absorbed by water. Calibration of the results obtained with this method depends on knowing the mix design of the concrete and the raw material used.

Carbide-Acetylene Test - This destructive test tells us nothing about the relative movement of moisture out of the concrete. It only quantifies that the portions of concrete removed and tested contain a measured content of moisture.





ASTM F2170-02 - Standard Test Method for Determining Relative Humidity in Concrete Floor Slabs Using in situ Probes - The test method, modeled after the process used in Europe for several years, requires drilling holes at a diameter of 5/8" to a depth equal to 40% of the slab's thickness. The hole is then lined with a plastic sleeve, capped and allowed to acclimate for 72 hours. The probe is placed in the sleeve, allowed to equilibrate for 30 minutes, and then readings are recorded.

Acceptable relative humidity readings for substrates receiving non-permeable flooring are 80% or lower. Testing should take place in an acclimated building and is required to equal three tests in the first 1,000 square feet, with one additional test per each additional 1,000 square feet of concrete slab surface. This test method is less subject to conditions occurring at the concrete surface that may influence calcium chloride test results. This method only defines existing moisture content of the sample and cannot address moisture vapor transmission.

ASTM D4263 - Standard Test Method for Indicating Moisture in Concrete by the Plastic Sheet Method - This qualitative method will indicate the presence of moisture movement, but it will not quantify the amount of moisture movement and is only useful in determining whether additional testing is required.

ASTM F1869 - Standard Test Method for Measuring Moisture Vapor Emission Rate of Concrete Subfloor Using Anhydrous Calcium Chloride Moisture Emissions Test - Originally developed by the Rubber Manufacturers Association, moisture vapor test kits use anhydrous calcium chloride to make a quantitative evaluation of vapor emissions from the concrete. To determine the amount of moisture movement, the floor and surrounding environment must be in the anticipated service condition. The test must be conducted over raw exposed concrete which has been exposed to the environment for at least 24 hours. A quantitative evaluation is conducted wherein the anhydrous calcium chloride container and contents are preweighed on a gram scale, allowed to remain in its container with the lid removed, and the container placed under a sealed dome to prevent loss of moisture for a period of 60-72 hours.

Three tests are required for the first 1,000 square feet, with one additional test for every 1,000 square feet or fraction thereafter. The container is removed and again weighed on a gram scale to determine the weight gain of the anhydrous calcium chloride. A calculation is performed to determine the amount of moisture absorbed. These results are quantified as the rate of moisture vapor transmission expressed as pounds per 1,000 square feet of surface area per 24 hours. Sherwin-Williams High Performance Flooring has adopted a commonly accepted value for application of polymer coatings or toppings to be not more than 3 pounds of moisture per 1,000 square feet per 24 hours.

Moisture content and moisture movement are merely snapshots in time of dynamic conditions within the concrete. Moisture vapor movement is dependent upon the relationship between temperature and humidity of the two adjacent environments — in this case, the internal environment of concrete and the external environment of the air surrounding the concrete. Any change in temperature and/or moisture content of either will result in a change in vapor pressure and the attempted movement of moisture vapor into or out of the concrete as referenced below.

It is the combination of temperature and humidity (called vapor pressure) that determines the direction of moisture movement. Moisture will move from a higher vapor pressure to a lower vapor pressure. When there is air movement over the surface of the concrete, moisture will attempt to move out of the concrete toward the area of air movement. For these reasons, it is important to measure the temperature and relative humidity during the test period. The Moisture Vapor Test Kit values will not be useful in predicting possible problem areas unless the tests are conducted in the environment in which the structure will be used. The air temperature and humidity around the concrete during the test should be the same air temperature and humidity that will be in place during the useful life of the structure. Contact the Technical Service Department if there are any questions concerning the use of the test kits or interpretation of the results.

To successfully and predictably reduce moisture vapor emission rates, apply one of the following remediation systems:

- Poly-Crete SLB
- Resuflor Aqua MCS
- Resuprime[™] MVB, MVP, MVP3



Consult with the Technical Service Department for specific recommendations and utilize in accordance with application instructions. For slabs with potential moisture issues, utilizing systems that are designed to accommodate moisture movement from the slab such as Poly-Crete SLB, Resuflor Aqua and Resuprime MVB, MVP or MVP3 may be the most cost-effective alternative. Whenever moisture issues present themselves on a project, document the conditions, inform the owner representative and consult with Sherwin-Williams High Performance Flooring Technical Service personnel.

Note: The industry standard for curing concrete is 28 days. This is usually sufficient to allow excess moisture to leave a concrete slab. To minimize moisture-related disbondment, new concrete should be allowed to cure 28 days before installation of Sherwin-Williams High Performance Flooring non-permeable resinous flooring systems. If any doubts exist concerning moisture in the slab, Calcium Chloride and/or Humidity tests should be run to document the presence of moisture.

	DEW POINT CALCULATION CHART (FAHRENHEIT)										
% RELATIVE	AMBIENT AIR TEMPERATURE °F										
HUMIDITY	20	30	40	50	60	70	80	90	100	110	120
90	18	28	37	47	57	67	77	87	97	107	117
85	17	26	36	45	55	65	75	84	95	104	113
80	16	25	34	44	54	63	73	82	93	102	110
75	15	24	33	42	52	62	71	80	91	100	108
70	13	22	31	40	50	60	68	78	88	96	105
65	12	20	29	38	47	57	66	76	85	93	103
60	11	19	27	36	45	55	64	73	83	92	101
55	9	17	25	34	43	53	61	70	80	89	98
50	6	15	23	31	40	50	59	67	77	86	94
45	4	13	21	29	37	47	56	64	73	82	91
40	1	11	18	26	35	43	52	61	69	78	87
35	-2	8	16	23	31	40	48	57	65	74	83
30	-6	4	13	20	28	36	44	52	61	69	77



TESTING

Testing for an Existing Sealer

Test to see if the floor is "sealed" by using the Water Break Test; please refer to ASTM 3191. If the poured water forms into droplets, then an existing sealer and/or paint may exist on the surface and must be removed by diamond grinding, steel shot blasting or other mechanical methods.

Salt Contamination Testing

Salt contaminated slabs that contain steel reinforcement are very susceptible to corrosion of the reinforcing steel. As the steel corrodes, it expands, causing cracking, delamination of concrete and any toppings bonded to it, and eventually, structural failure of the slab. Obvious signs of chloride or salt contamination are spalled concrete with exposed, rusted, reinforcing steel.

METHODS OF SURFACE PREPARATION

Diamond Grinding

Diamond grinding is another preferred choice for preparing concrete for polymer floor systems. Diamond grinders are floor grinders equipped with diamond abrasives. With multiple grit options available, they are capable of achieving a wide range of concrete surface profiles appropriate for most resinous flooring systems. Additionally, diamond grinding is used for mechanically profiling and removing existing coatings and adhesives. Immediately after diamond grinding, vacuuming is required to remove all dust from the substrate.

Hand Tool

Hand tool preparation consists of the use of mechanical tools and equipment designed to abrade or chip away the surface of the concrete. Common tools available include chipping hammers, handheld diamond grinders and concrete crack chasing saws. These tools are typically used to make keyways and prepare edges against walls and columns.

TYPES OF SUBSTRATES

Fiber-Filled Concrete

Fiber-filled concrete must be burned with a propane weed burner, swept and vacuumed perfectly clean, and then primed. When primer has completely cured, the floor must be sanded and tack ragged (This step may not be necessary for thick resurfacing systems).

Quarry/Ceramic Tile

Quarry/ceramic tile have been successfully resurfaced on many projects without the removal of the tile and setting bed. A site investigation along with cores through the entire slab will help identify the type of setting bed, the existence of any waterproofing membranes, additional toppings, or other unusual existing conditions. Water trapped within the floor will create long-term sanitation and performance problems.

If the tile is well bonded and placed over an unsaturated latex setting bed, the floor may be resurfaced. Please consult with a Sherwin-Williams Technical Service Representative to determine appropriate mechanical surface prep method, fillers and products.





Existing Epoxy Coating/Resurfacer

Existing seamless floors may be resealed or resurfaced from time to time due to excessive wear, or the need to change the appearance or skid resistance of the floor. The existing floor should first be cleaned and degreased with either EZ-Clean floor cleaner/degreaser or Simoniz 969 cleaner. It must then be mechanically abraded to totally remove the gloss and vacuumed perfectly clean. "Tack rag" area to remove remaining dust. Consult your Technical Service Manager to determine the best preparation for the individual coatings.

Plywood

The plywood substrate must be sound and non-flexing under the expected load. Typical plywood substrate must be exterior or marine grade, new, clean and smooth finish (NO KNOTS). Two layers with staggered joints are required. Plywood should be positively fastened to the existing surface with a high-quality construction adhesive as well as a 6" screw pattern. For further information on plywood substrates, please contact your local sales representative or Sherwin-Williams technical department.

WALLS

For Resuwall applications:

Block Wall

Apply Block Filler to fill pores over new or existing concrete block, following the application instructions.

Drywall

Drywall must be finished to a level #5 paint-ready finish prior to coating. Prime with Extreme Bond Primer. Substrate will affect final appearance of wall coating.

NOTE: Resuwall products require preparation in order to perform as expected. Substrates must be clean, sound and dry. If installing over substrates other than block wall or drywall, please consult the Sherwin-Williams Technical Service Department.

Flooring problems on concrete from vapor emission, dew point, alkalinity, pH, etc., cause millions of dollars in repair and replacement costs annually. By recognizing potential problems, testing for and mitigating them, steps can be taken to ensure a long-lasting, successful flooring installation.

WHAT IS MOISTURE VAPOR EMISSION?

Water is added to turn cement, sand and aggregate into a concrete slab. There is a critical volume of water needed to "hydrate" the concrete and an excess volume of water used to make the concrete pourable and workable. It is this excess that can emit from the slab. Moisture is also a concern when the concrete slab has no vapor retarder installed, or the vapor retarder has been punctured.

HOW DOES MOISTURE MOVE THROUGH THE SLAB?

Capillary Moisture

Ground water touches the bottom of the concrete slab, and wicks into the concrete through microscopic bleeder water channels until it reaches the coating surface. As the water comes through the slab, it brings calcium/sodium salts with it; this can degrade the bond line and cause the coating to delaminate.

Osmotic Moisture

Actual water vapor transmission through the concrete slab condenses again at the bond line and causes the same problem as in the capillary moisture case. This can happen when the water table is far below the slab with an improperly installed or missing vapor retarder. Three conditions are needed for osmosis to occur: a semi-permeable membrane, which can be the polymer primer or the upper layers of the slab; a gradient of ionic activity (soluble salts, which are indigenous to concrete); and a source of moisture vapor. If any one of these three things is removed, osmosis cannot occur.

Hydrostatic

The surrounding water table is higher than the concrete slab on grade. Because water seeks its own level, it is forced through the slab under pressure. This type of water pressure is not the usual cause of coating failure.

The volume of moisture that can pass through a slab depends on the porosity of the slab. Porosity is a direct result of the water/cement ratio in the concrete mix design. As the water/cement ratio increases, the porosity of the concrete increases exponentially.

WHAT IS THE TRADITIONAL FAILURE MODE BECAUSE OF "MOISTURE" PROBLEMS?

There are two ways a polymeric floor can fail:

- 1. The floor system was never able to bond properly at the time of installation.
- 2. There were factors present at the time of installation to cause the bond to fail. Symptoms of failure on an already installed floor may include bubbles, blisters and/or delamination.

WHAT CAUSES A POLYMERIC FLOOR TO FAIL?

Specific ionic components of the surface chemistry of the slab (the top 0 - 3/16" [5mm]), past a certain threshold, can cause a failure to occur. Moisture failures such as capillary action, hydrostatic pressure and osmotic blistering can also occur.

Concrete defects resulting from alkaline-silicate reaction (ASR) or alkaline-aggregate reaction (AAR) within the slab may also contribute to floor failure. Sherwin-Williams High Performance Flooring recommends all concrete be tested for quality by a licensed petrographer.

HOW DO I TEST MY FLOOR?

Sherwin-Williams High Performance Flooring has developed a chart to assist you with identifying the moisture limits for each type of Sherwin-Williams flooring system. If you are planning to use our Epoxy or MMA, Sherwin-Williams recommends using in-situ Relative Humidity (RH) Testing per ASTM F-2170 as a quantitative test method. In-situ RH is the preferred method as it is not significantly impacted by ambient temperature and relative humidity conditions in the building, and thus likely to provide more accurate readings. Calcium chloride (CaCl) testing is not recommended for moisture testing as results will differ based on the environmental factors at time of testing.

In cases where a product can tolerate high levels of moisture such as Poly-Crete®, Hybri-Flex® or Resuprime MVP, Sherwin-Williams High Performance Flooring may recommend that cores be taken and analyzed to determine the levels of ionic components (salts) in the slab. Sherwin-Williams High Performance Flooring offers in-house core testing using ion-chromatography technology. Refer to the Sherwin-Williams High Performance Flooring Core Analysis Program on our website for more information.

Note: Test results from cores taken after osmotic blistering has already occurred may not be accurate due to the ionic components transferring from the substrate to the blisters.

SHERWIN-WILLIAMS HIGH PERFORMANCE FLOORING FLOOR MOISTURE LIMITATIONS

	RESUFLOR	ACCELERA	CRYLAFLOR	VENT-E	RESUPRIME MVP PRIMER	RESUPRIME MVP3 PRIMER	POLY-CRETE & HYBRI-FLEX
RH % MAXIMUM (ASTM F-2170) Recommended Test Method	80%	80%	85% (with bond test)	99%	99%*	99%*	99%*
CACL MAXIMUM LBS. PER 1,000 SF PER 24 HOURS (ASTM F-1869)	3	3	5 (with bond test)	N/A	20*	24*	20*

*Poly-Crete, Hybri-Flex and Resuprime MVP Primers

Old Concrete (>1 yr. old)

Core analysis testing is recommended to rule out the potential for osmotic blistering caused by higher than normal levels (see next page) of soluble ion (salt) deposits at or near the surface. Refer to the Sherwin-Williams High Performance Flooring Core Analysis Program.

New Concrete (<1 yr. old)

Core testing is not required if NO concrete curing compounds, hardeners or densifiers were used. The use of any of these products may cause soluble ion (salt) deposits at or near the surface to exceed normal levels (see below), potentially producing conditions for osmotic blistering. In these cases, Sherwin-Williams recommends a core analysis to determine if these levels are suitable for an installation. Refer to the Sherwin-Williams High Performance Flooring Core Analysis Program.



The following data is based on testing of a concrete substrate profiled per G1 Concrete Surface Preparation Guidelines and free of any contaminants that could increase levels of the soluble ions listed. This data is to be used as a guide only. Please contact your local Sherwin-Williams High Performance Flooring Territory Sales Manager or the Sherwin-Williams High Performance Flooring Technical Service Department for a thorough analysis of your results.

NORMAL SOLUBLE ION LEVELS IN SUBSTRATE (PARTS PER MILLION)							
Sodium (Na)	~200-800 ppm						
Potassium (K)	~200-800 ppm						
Chloride (CI)	~10-100 ppm						
Sulfate (SO ₄)	~1500-5500 ppm						

PRE-INSTALLATION ACCEPTABLE SOLUBLE ION LEVELS IN SUBSTRATE BY PRODUCT (COMBINED NA, K, CL)					
Epoxy, Resuprime MVP, MMA, Accelera®	1600 ppm				
Resuprime MVP3	2400 ppm				
Poly-Crete® SLB, MD, HF (with topcoats) Hybri-Flex® E, M or A	3200 ppm				
Vent-E	4800 ppm				
Poly-Crete MD, HF (no topcoats)	4800 ppm				

In all cases, Sherwin-Williams High Performance Flooring products must be applied as per Sherwin-Williams High Performance Flooring Application Instructions on structurally sound and clean areas in which the concrete meets acceptable industry standards as defined in ACI Committee 201 Report, "Guide to Durable Concrete." Sherwin-Williams shall not be liable for bond failures caused by deficiencies in the substrate including, but not limited to, the presence of ionic compounds or soluble salts, alkali silicate reaction, alkali aggregate reaction, shale-pop, and other expansive reactions of aggregates and reinforcements. Sherwin-Williams recommends all concrete be tested for quality by a licensed petrographer.





RESIN FLOORING CHEMICAL RESISTANCE GUIDE

	BROADCAST SYSTEMS								ЕРОХҮ С	OATING	s						URETHANE COATINGS					POLYASPARTIC/ FAST CURE COATINGS				RETHANI ONCRETE		
	RESUFICE	RESUPLOR	RESURI OF	RESUFICE	RESURIO	RESUFLOR"	RESUPLOBY STAINOVOLAC	RESUPLOS.	RESURIOE	RESUPLOR	RESUFLOR	RESUFLOD.	RESUFI OVE	PESUFI CARD	RESUFI OF	RESUFICE	RESUTH C.	RESUTIN.	RESUME 4685 AND UNE US	RESUTUE TO STATE	RESUTUES	ACCELED.	ACCELED .	ACCELERA" (REGILERA"	ACCELES	POLY-CRETT	POLY-COT	MMA COATINGS
3M™ Stainless Steel	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	OK	TS	TS	TS
3M™ Duraprep	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	NR	SD	SD	TS	TS	NR	SD	TS	SD	TS	TS	SD	SD	SD	SD	SD
AC-103 - 100%	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	OK	OK	SD	TS	TS	TS	TS	TS	OK	TS	TS	SD	TS	OK	SD	OK
Acetaldehyde	TS	TS	TS	OK	SD	OK	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	SD	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS
Acetic Acid - 3%	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	OK	OK	OK	TS	TS	TS	TS	TS	OK	TS	TS	OK	TS	OK	ОК	OK
Acetic Acid - 5%	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	TS	ОК	OK	TS	OK	TS	TS	OK	TS	TS	TS	TS
Acetic Acid - 10%	SD	OK	ОК	OK	SD	OK	SD	SD	SD	SD	SD	SD	OK	OK	OK	OK	OK	ОК	OK	OK	OK	OK	OK	OK	TS	OK	ОК	OK
Acetic Acid - 30%	SD	TS	TS	OK	SD	OK	SD	TS	TS	TS	TS	TS	SD	SD	OK	TS	SD	ОК	TS	TS	SD	SD	TS	SD	TS	OK	SD	SD
Acetic Acid - 50%	SD	TS	TS	OK	SD	OK	SD	TS	TS	TS	TS	TS	NR	NR	NR	TS	SD	ОК	TS	TS	SD	SD	TS	SD	TS	SD	SD	NR
Acetic Acid (50%) to Glacial (100%)	TS	TS	TS	SD	NR	SD	SD	TS	TS	TS	TS	TS	TS	TS	TS	TS	SD	SD	TS	TS	TS	SD	TS	TS	TS	TS	TS	TS
					View Full Chemical Resistance Chart																							

The Chemical Resistance Guide can be found in its entirety at: https://industrial.sherwin-williams.com/content/dam/pcg/sherwin-williams/resin-flooring/na/us/en-us/pdfs/project-prep-docs/Flooring-Chemical-Resistance-Guide-SW.pdf

MAINTENANCE GUIDE

MAINTENANCE RECOMMENDATIONS GENERAL CLEANING & MAINTENANCE

Floors usually take the most abuse of any surface in the building. Floor maintenance is dependent upon the flooring system itself, the traffic conditions, and the type of dirt and debris to which it is exposed. Sherwin-Williams resinous floors are easily maintained because of their physical and chemical tough finishes.

In recognition of the need for regular floor maintenance, the following recommendations will help keep your Sherwin-Williams resinous floors looking like new. The recommended cleaning products and maintenance program is based on the type of floor you have.

RECOMMENDED CLEANING CHEMICALS

	AREA DESCRIPTION	RECOMMENDED CLEANER
FOOT TRAFFIC	Public areas, health care, dining room/cafeteria, lab, institutional, retail, foot traffic area	Neutral slip-resistant floor cleaner
LIGHT TO MODERATE SERVICE AREAS	Animal care, automotive service center, commercial kitchen/food prep area, patio	Cleaner/degreaser
MODERATE TO HEAVY SERVICE AREAS	Bottling plant, factory floor, loading dock, manufacturing/industrial, vehicular traffic area, stadium	Heavy-duty cleaner/degreaser
ESD/CONDUCTIVE FLOORS	Clean room, computer room, electronics production and assembly, quality control lab, surgery	Neutral floor cleaner
FOOD AND BEVERAGE PLANTS	Dairy plant, meat & poultry plant, food processing plant, brewery, winery and beverage plants	Cleaner/degreaser

CLEANING PROCESS

The best method to clean Sherwin-Williams flooring is a five-step process using the recommended cleaning product. The process varies between small and large floors, and between smooth and textured floors.

THE FIVE STEPS ARE:

- **Sweeping** Always sweep the floor thoroughly before cleaning.
- Application The means to put the cleaning product on the floor surface.
- **Agitation** Movement of the cleaning product, with a piece of equipment, on the floor surface to aid in the release of foreign material.
- Dwell Time Letting the cleaning product stand on the surface to allow time for emulsifying foreign material.
- Removal Removing the cleaning product from the surface of the floor.



GENERAL CLEANING & MAINTENANCE

	SMOOTH FLOOR	RING SURFACES	TEXTURED FLOORING SURFACES				
	SMALL AREA	LARGE AREA	SMALL AREA	LARGE AREA			
SWEEPING	Broom or dust mop	Floor sweeper	Broom	Floor sweeper			
APPLICATION	Synthetic mop or deck brush	Automatic floor scrubber	Deck brush or foamer/sprayer	Automatic floor scrubber or foamer/sprayer			
AGITATION	Mop or deck brush	Automatic floor scrubber	Deck brush or rotary floor machine	Automatic floor scrubber or rotary floor machine			
DWELL TIME	5-10 minutes	5-10 minutes	5-10 minutes	5-10 minutes			
REMOVAL	Mop or wet vac	Automatic floor scrubber	Squeegee or wet vac	Automatic floor scrubber			

Notes:

- Never use a mop to clean a floor that is greasy or oily.
- When using a deck brush, choose a medium/stiff bristle.
- · When using a rotary floor machine, use a white, tan or red 3M pad or similar pad.
- When removing solution with a squeegee, use a soft, neoprene squeegee.
- Do not use a water spray to remove cleaning solution from the floor. It will over dilute the solution, causing greases and oils to fall back onto the floor surface.
- Through proper training and education, unnecessary wear of the floor, such as forklift spin and skid marks, can be avoided.
- Spills should be cleaned up immediately as a safety precaution as well as to prevent staining
 of the floor.
- · Surfaces should be adequately protected when moving heavy equipment across the floor.

MAINTENANCE/DAMAGE PREVENTION


Sherwin-Williams resinous floors are installed with several basic types of finish coats including epoxy, polyurethane and acrylic.

Acrylic and polyurethane floors have exceptional mar and scratch resistance while epoxy finishes are harder and will scratch when subjected to abrasive dirt.

The two basic joint types are Moving (dynamic) and Non-Moving (static).

MOVING JOINTS

Construction, Expansion and Isolation joints are considered moving joints. These allow horizontal and vertical movement between the slab and adjoining structures, such as walls and columns, helping to minimize cracking where the two meet.

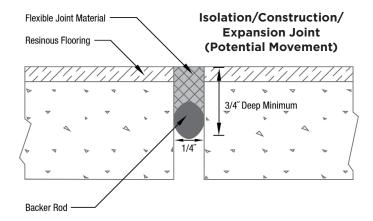


Prior to filling moving joints, Sherwin-Williams High Performance Flooring recommends "honoring" these joints by making a sawcut through the finished floor system at a minimum depth of $\sqrt[3]{4}$ " deep and $\sqrt[4]{4}$ " wide with a diamond blade saw attached to a vacuum. Refer to the joint sealant manufacturer's product data sheet for the recommended depth. A bond breaker such as backer rod (closed cell) must be added to the bottom of the joint.

Potential cracking and/or stress/stretch lines (white lines) may occur on all resinous floor systems over or on either side of moving joints if the joints are not sawcut and properly filled. Also, if there is a variance of temperature of 20 degrees or more from the time the joint is filled and coated to its operational temperature, hairline cracking could occur even on non-moving joints.

NON-MOVING JOINTS


Control and/or Contraction joints are considered non-moving joints, which accommodate shrinkage and relieve internal stresses during the curing process of the concrete.

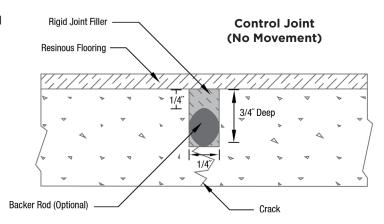


Prior to filling non-moving joints, be sure to prepare them by removing all laitance, debris and sealers to a depth of $\frac{3}{4}$ " deep and $\frac{1}{4}$ " wide with a diamond blade saw attached to a vacuum. A bond breaker such as backer rod (closed cell) may be added to the bottom. This will stop the joint material from seeping if the concrete is cracked through.

REPAIR OF DAMAGED/SPALLED JOINTS

Sawcut each side of spalled area and chip out the center with a chipping hammer or consider the use of a series of blades to reach the proper width. If using multiple blades, the center blade should reach the depth of the original joint and the outer blades should achieve a cut creating a "T" shape after cutting.

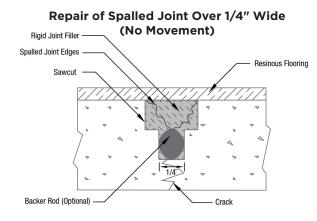

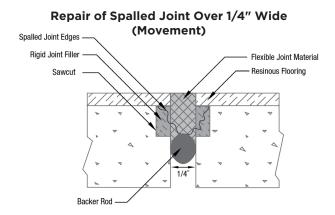

INSTALLATION TIMING

The American Concrete Institute (ACI) recommends that filling of industrial floor joints be deferred 60-90 days after floor slab pour or as long as possible. This is to allow control and construction joints time to open closer to their ultimate width through the concrete shrinkage process (In freezer/cooler areas, floor should be stabilized at ultimate operating temperature for 7 days prior to installation).

Prior to treatment of joints, be sure to contact the facility's owner or manager to determine how long the concrete has cured as well as the location of moving and non-moving joints.

Refer to table below to determine which product is used where:

JOINTS	ТҮРЕ	BOND BREAKER	JOINT MATERIAL (1/4 INCH WIDE)	JOINT MATERIAL (OVER 1/4 INCH WIDE)
Moving (Dynamic)	Expansion/ Construction /Isolation	Backer Rod 1/8" wider than joint	Flexible joint material (Metzger/McGuire, VersaFlex or equivalent)	Flexible joint material (Metzger/McGuire, VersaFlex or equivalent)
Non-Moving (Static)	Control/ Contraction	Optional Backer Rod 1/8" wider than joint	 Epoxy flooring systems use Resuflor™ Glaze with Cab-O-Sil (No-Sag #2): Typical mix is 1 pint Resuflor Glaze hardener, 1 quart Resuflor Glaze resin, 3 quarts Cab-O-Sil (No-Sag #2) Poly-Crete® flooring systems use Poly-Crete SL or MD to fill joint MMA flooring systems use MMA SL Filler Mix Vent-E flooring systems use Metzger/McGuire MM-80 	 Epoxy flooring systems use Resuflor Glaze with Resuflor Screed III Poly-Crete flooring systems use Poly-Crete MD or WR MMA flooring systems use MMA SL Filler Mix or Cryl-A-Tex Vent-E flooring systems use Metzger/McGuire MM-80

References:

ACI 224 "Joints in Concrete Construction"
ASTM Standards "C 1193 and C-920"
National Ready Mixed Concrete Association "Concrete in Practice"
Metzger/McGuire, Inc.
AMPP

In accordance with our warranty, Sherwin-Williams High Performance Flooring shall not be responsible for any claim resulting from failure to utilize product in a manner in which it was intended and in accordance with instructions provided for use of the product, such as these joint guidelines.



CRACK TREATMENT GUIDELINES

Similar to joints, cracks can be classified as static or dynamic and should be addressed in a similar manner as joints. Before treating, it is important to note what type of crack it is.

DYNAMIC CRACKS

Dynamic cracks, or active cracks, are any cracks for which the mechanism causing the cracking is still at work; any cracks that are still moving. If there is known movement or visible heaving, please contact a structural engineer before attempting repairs.


Examples of dynamic cracks are:

Settling/Structural Cracks may appear if the sub base of the slab shifts or settles after construction. These should be treated as moving joints and honored through the system.

Heaving Cracks are often a sign of continued movement of the slab or slabs.

Seismic Cracks can be caused by movement of the ground under or near a building. This can occur from natural seismic activity, or from man-made forces, such as nearby railroad tracks, etc. It is best to identify the cause of these and determine the best way to isolate the flooring from this movement if possible.

Prior to filling dynamic cracks, Sherwin-Williams High Performance Flooring recommends making a sawcut through the finished floor system to a depth of 3/4" deep and a minimum width of 1/4" with a diamond blade saw attached to a vacuum. Add a bond breaker such as a backer rod (closed cell) to the bottom. This will prevent three point adhesion.

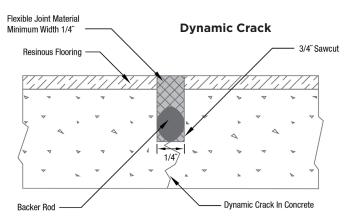

STATIC CRACKS


Static cracks, or dormant cracks, are any cracks that are not likely to become active in the future or whose movement is of such magnitude that a repair will not be affected.

Examples of static cracks are:

Craze Cracking refers to hairline cracks visible in the surface cream of the slab that typically do not extend very deep and are usually a result of rapid drying of the cream. Craze cracking usually does not require any special treatment and is usually mitigated in the prime coat.

Plastic Shrinkage Cracking is normal, non-structural cracking of the concrete that occurs as the slab cures. This can often be avoided by proper placement of control joints per ACI 302.1R-15.

- Plastic shrinkage cracks should be analyzed to ensure that they are static (not continuing to grow over time and do not show signs of heaving.)
- If plastic shrinkage cracks are observed prior to or during prep, they can be mitigated by patching the floor in the same method that would be used to treat a static joint.
- Plastic shrinkage cracks can also be treated using Resuflor 3555 or Resuflor EOC and fiberglass mesh to bridge the crack.

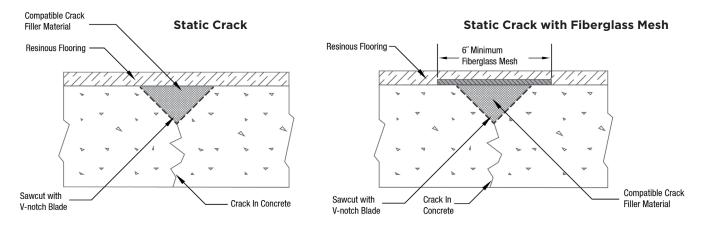

Prior to filling static cracks, be sure to prepare them by removing all laitance, debris and sealers. Make a sawcut with a V-notch blade attached to a vacuum.

Refer to the table below to determine which Crack Filler Material to use:

CRACKS	BOND BREAKER	REINFORCEMENT	CRACK FILLER MATERIAL (1/4 INCH WIDE)	CRACK FILLER MATERIAL (OVER 1/4 INCH WIDE)
Dynamic crack (moving)	Backer rod 1/8" wider than joint	-	Flexible joint material (Resuflor 3580, Loxon [S1, SL2 & NS2] or equivalent)	Flexible joint material (Resuflor 3580, Loxon [S1, SL2 & NS2] or equivalent)
Static crack (non- moving)	-	Optional 6 inch minimum fiberglass mesh	 Epoxy flooring systems use Resuflor Glaze with Cab-O-Sil (No-Sag #2): Typical mix is 1 pint Resuflor Glaze hardener, 1 quart Resuflor Glaze resin, 3 quarts Cab-O-Sil (No-Sag #2) Poly-Crete flooring systems use Poly-Crete SL or MD to fill joint MMA flooring systems use MMA SL Filler Mix Vent-E flooring systems use Resuflor 3580 	 Epoxy flooring systems use Resuflor Glaze with Resuflor Screed III. Poly-Crete flooring systems use Poly-Crete MD or WR MMA flooring systems use MMA SL Filler Mix or Cryl-A-Tex Vent-E flooring systems use Resuflor 3580

INSTALLATION TIMING

The American Concrete Institute (ACI) recommends that filling of industrial floor joints be deferred 60-90 days after floor slab pour or as long as possible. This is to allow control and construction joints time to open closer to their ultimate width through the concrete shrinkage process (In freezer/cooler areas, floor should be stabilized at ultimate operating temperature for 7 days prior to installation). We suggest the same for treating cracks.

Prior to treatment of crack, be sure to contact the facility's owner or manager to determine how long the concrete has cured as well as the location of moving and non-moving joints.

Note: Even with proper treatment, there is no guarantee against future cracking.

References:

International Concrete Repair Institute
ACI 224 "Joints in Concrete Construction"
ASTM Standards "C 1193 and C-920"
National Ready Mixed Concrete Association "Concrete in Practice"
AMPP

In accordance with our warranty, Sherwin-Williams High Performance Flooring shall not be responsible for any claim resulting from failure to utilize product in a manner in which it was intended and in accordance with instructions provided for use of the product, such as these crack treatment guidelines.





LIMITED PRODUCT WARRANTY

The Protective and Marine Division of The Sherwin-Williams Company ("Sherwin-Williams") warrants the products in its Coating Systems to be manufactured free from defects in materials and workmanship for a period of one (1) year from the date of delivery (the "Warranty Period").

Sherwin-Williams shall not be liable for any claims resulting from or related to (i) use of any Products in applications not recommended or approved in writing by Sherwin-Williams, (ii) improper application including improper surface preparation or failure to remove any bond breakers, curing compounds or laitance from the substrate, (iii) failure of or conditions related to the substrate, (iv) any damage or failure unrelated to the performance of the Products or (v) color.

EXCEPT FOR THE PRECEDING WARRANTIES, SHERWIN-WILLIAMS HEREBY DISCLAIMS ANY AND ALL OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ORAL OR WRITTEN, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT SHALL SHERWIN-WILLIAMS BE LIABLE TO APPLICATION CONTRACTOR OR ANY OTHER PARTY FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR LOSS OF USE IN ANY WAY ARISING FROM THE MANUFACTURE, SALE, INSTALLATION OR PERFORMANCE OF THE PRODUCTS.

Sherwin-Williams agrees to provide replacement Product for any Product proven to be defective under this Limited Warranty. Sherwin-Williams' entire liability for any Product proven to be defective, and the sole and exclusive remedy in any way relating to the Product, shall be limited to the replacement Product to make the necessary repairs. This Limited Warranty shall be governed and construed in accordance with the laws of the state of Ohio. Any and all disputes, claims, actions or proceedings directly or indirectly arising out of or related to this Limited Warranty shall be decided solely and exclusively by a federal or state court located in Cuyahoga County, Ohio.

Any claim under this Limited Warranty must be made in writing to Sherwin-Williams within thirty (30) days of discovery and prior to the expiration of the Warranty Period. All claims shall be sent to: The Sherwin-Williams Company, 101 W. Prospect Avenue, Cleveland, OH 44115, Attention: Vice-President - Sales, Protective & Marine Division. Each claim under this Limited Warranty must contain a description of the alleged defect and Sherwin-Williams must have an opportunity to inspect the application and perform any required product testing to make a determination on the claim.